



NovoConnect™ B360

Wireless Presentation & Collaboration System



User Manual Version 0.98

Table of Contents

TABLE OF CONTENTS	2
1. GETTING STARTED	5
1.1 Package Contents	5
1.2 Connecting your NovoConnect B360 Device.....	5
1.3 Software Download and installation.....	7
2. WIFI SETUP.....	9
2.1 Hotspot Mode	9
2.2 Client Mode	10
3. MAKING A PRESENTATION	11
3.1 Presenting with Windows and Mac PC	11
3.1.1 Step 1: Presentation Software Configuration.....	11
3.1.2 Step 2: Connect to your B360 device	13
3.1.3 Step 3: Making a Presentation	13
3.1.4 Step 4: Presentation Management	14
3.1.4.1 Role Assignment	14
3.1.4.2 Role Change, Screen Preview, and 4-way Split Screen	14
3.1.4.3 Pause, Resume, and Disconnect	17
3.1.4.4 Reset.....	17
3.2 Presenting with iOS Tablet (iPad).....	19

3.2.1 Step 1: Presentation Software Configuration.....	19
3.2.2 Step 2: Connect to your B360 device	21
3.2.3 Step 3: Making a Presentation	22
3.2.3.1 Presenting an Image	23
3.2.3.2 Presenting a Document	24
3.2.3.3 Presenting with a Browser	25
3.2.3.4 Annotation.....	27
3.2.4 Step 4: Presentation Management	28
3.2.4.1 Role Assignment	28
3.2.4.2 Role Change, Screen Preview, and 4-way Split Screen	30
3.2.4.3 Pause, Resume, and Disconnect	33
3.2.4.4 Reset.....	34
3.3 Presenting with Android Tablet	35
3.3.1 Step 1: Presentation Software Configuration.....	35
3.3.2 Step 2: Connect to your B360 device	36
3.3.3 Step 3: Make a Presentation.....	38
3.3.3.1 Presenting an Image	39
3.3.3.2 Presenting a Document	40
3.3.3.3 Presenting with a Browser	41
3.3.3.4 Annotation.....	43
3.3.4 Step 4: Presentation Management	44
3.3.3.1 Role Assignment	44
3.3.3.2 Role Change, Screen Preview, and 4-way Split Screen	46
3.3.3.3 Pause, Resume, and Disconnect	49

3.3.3.4 Reset.....	50
3.4 Presenting with the NovoConnect B360 Device.....	51
4. B360 CONFIGURATION.....	54
5. SPECIFICATIONS.....	56
6. TROUBLESHOOTING.....	58
7. SAFETY INFORMATION	60

1. Getting Started


1.1 Package Contents



(a) B360 main unit




(b) Micro-HDMI to HDMI cable



(c) Micro-USB-to-USB power cable




(d) USB power adapter

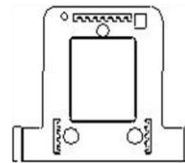

(e) NovoConnect mount

1.2 Connecting your NovoConnect B360 Device

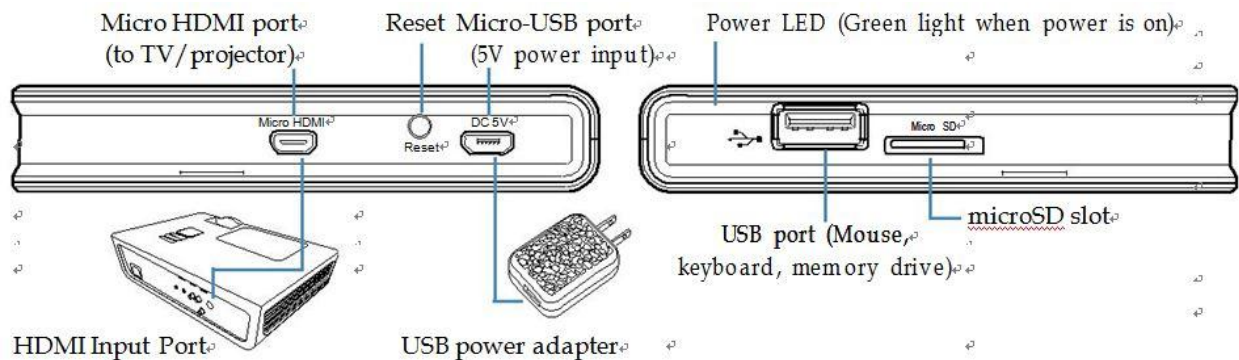

Steps to connect your NovoConnect B360 Device:

1. Video/Audio connection: Connect the Micro HDMI port to the TV/projector's HDMI input port using the Micro-HDMI-to-HDMI cable (item (b) in "Package Contents.")
2. Power: Connect the Micro-USB port to the power source using the Micro-USB-to-USB power cable and the USB power adapter (items (c) and (d) in "Package Contents.")

Note: In this manual, your NovoConnect B360 will also be referred to as B360 for short.

Note: You may connect an optional USB mouse, keyboard, or memory drive to the USB port.

Note: The microSD slot supports FAT32 and NFS file types.

The NovoConnect Home Screen



The NovoConnect B360 device will power up with the above display after steps 1 and 2 in last section. This display is referred to as the “NovoConnect home screen” or just the “home screen” in the document. The display is generated by the presentation management software, in the B360 device, which is also known as the *remote viewer*.

A Presentation Setup

The lower right corner of the home screen shows the name of the presentation group, IP address, four-digit PIN, WiFi SSID, and the WiFi Mode Setting. Your actual presentation setup information is generated by your B360 and may differ from the information shown in the figure on this page.

B Software Download

The lower left corner of the NovoConnect home screen shows the location where you can download the presentation software required to make a wireless presentation on Windows PC, Mac PC, iOS tablet, or Android tablet.

You can also find the presentation software on the Delta official website:

<http://www.deltaww.com/EduSolution>

1.3 Software Download and installation

The NovoConnect B360 device supports up to 64 concurrent participants across a mix of PC and Tablet devices. Each participant's device will need to set up a connection with the presentation application, the *remote viewer*, residing on the B360 to make a presentation. To set up the connection and make a presentation, you will need to download and install the following application software:

On Windows PC - *NovoConnect Desktop Streamer*

On Mac PC - *NovoConnect Desktop Streamer*

On iOS tablet – *NovoPresenter*

On Android tablet – *NovoPresenter*

Note: Throughout the document, these four presentation application software and the B360 *Remote Viewer* software are highlighted in *Italics* font.

Downloading the Presentation Software for Windows PC and Mac PC

Enable Wi-Fi on the computer. Click the network icon , , or . Select the B360 SSID on the NovoConnect home screen (for example, NVC_DC9AB) and click Connect or Join. Ignore all security warnings.

Launch the web browser of your choice on your PC and enter the URL displayed on the NovoConnect home screen. In the example display screen shown above, you would enter <http://192.168.43.1:8080> into the address line of the browser. The following screen will be displayed on your browser.



Select the operating system type from the drop down menu and then click the **DOWNLOAD** button to download the NovoConnect *Desktop Streamer* software to your PC.

Installing the Application Software

Run either *Desktop_Streamers_Setup_Windows.exe* (for MS Windows based computers) or *Desktop_Streamers_Setup_Mac.exe* (for Macintosh computers) by double clicking the downloaded file on your computer. Follow installation instructions on the PC to complete the installation. Allow all security permissions for NovoConnect Desktop Streamer and all of its subcomponents.

The computer is now ready to make a wireless presentation with your B360.

Downloading and Installing the Presentation Software for Android and iOS Tablet Devices

On iOS tablets, the iOS version of the *NovoPresenter* is required. You can download and install it from the Apple App Store.

On Android tablets, the Android version of the *NovoPresenter* is required. You can download and install it from the Google Playstore.

Once you have downloaded and installed the presentation software, you are ready to make a wireless presentation from your tablet device.

2. WiFi Setup

Depending on where your presentation content is located, you may select

- A) Client Mode – for content residing in a networked environment or the Internet cloud
- B) Hotspot mode – for content residing in your PC or Tablet
- C) Either – for content residing in your microSD card

The NovoConnect B360 defaults to start up in WiFi Hotspot mode, which is the shortest path to make a wireless presentation without needing a WiFi AP. If this is your preferred mode, you may skip to next chapter for steps to making a presentation.

If you would like to make your presentation in a WiFi AP networked environment, please refer to the “Client Mode” section in this chapter.

2.1 Hotspot Mode

Right out of the box, NovoConnect’s WiFi is set to function as a WiFi Hotspot and will stay in this configuration until you alter it. The default SSID for the WiFi Hotspot is “NVC_XXXXX”, where “XXXXX” is a machine generated string of characters and numbers. A mouse is required for the following steps.

If you alter your settings and then choose to revert to Hotspot mode, on the NovoConnect home screen, select **WiFi-> Hotspot Mode->Apply**.

For a PC to connect to the B360 Hotspot, click the network icon  on task bar. Select the SSID of the NovoConnect B360 device shown on the home screen (for example, NVC_DC9AB) and click **Connect**.

For a Mac to connect to the B360 Hotspot, click the network icon . Select the SSID of the NovoConnect B360 device shown on the home screen (for example, NVC_DC9AB) and click **Join**. Ignore any security warnings.

For a tablet to connect to the B360 Hotspot, enable WiFi and go to the WiFi AP list. Select the SSID of the NovoConnect B360 device shown on the home screen (for example, NVC_DC9AB).

Note: In Hotspot mode operation, all participating presentation devices must be connected to the same NovoConnect B360 WiFi HotSpot.

2.2 Client Mode

In this mode, the B360 device functions as a WiFi client and a WiFi AP is needed for network connectivity. A mouse is required for the following steps.

In the home screen of the NovoConnect, first select **WiFi->Normal Mode-> Config->Wireless & Networks-> Wi-Fi (ON)**, and then select the desired WiFi AP SSID. Enter password if prompted.

For a PC to connect to the Wi-Fi AP, click the network icon . Select the desired WiFi AP SSID. Enter password if prompted.

For a Mac to connect to the Wi-Fi AP, click the network icon . Select the desired WiFi AP SSID and click **Join**. Enter password if prompted.

For a tablet to connect to the Wi-Fi AP, enable WiFi and go to the WiFi AP list. Select the desired WiFi AP SSID. Enter password if prompted.

3. Making a Presentation


The NovoConnect B360 device supports up to 64 concurrent participants across a mix of PC and Tablet devices. To make a presentation, each participant's device will need to connect to the B360 and join the presentation group hosted by the B360. There are three key features which help facilitate smooth collaboration and coordination of presentations using the NovoConnect:

- 1) A participant list is included with the individuals' roles indicated with clear graphical representation
- 2) A specific capability is defined for each role
- 3) Split screen and annotation tool for simultaneous operation of multiple participants.

3.1 Presenting with Windows and Mac PC

Launch Presentation Application

Launch the *NovoConnect Desktop Streamer* Application by double clicking the  icon. The *NovoConnect Desktop Streamer* will be launched (pictured in the image below).

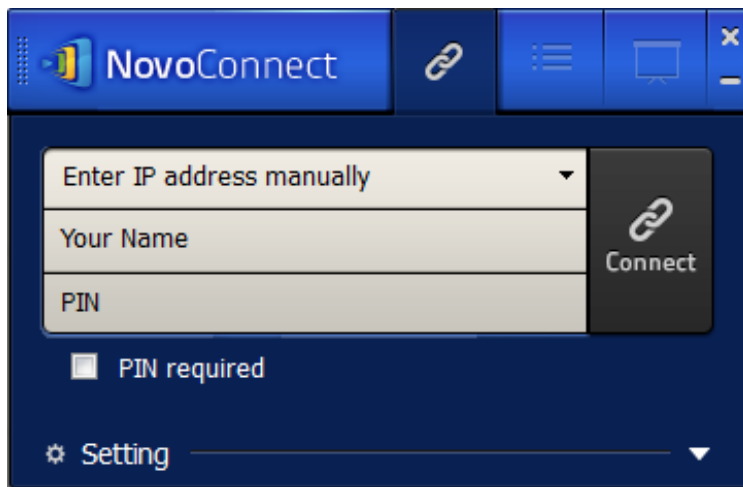

To make a presentation, you must follow the below steps:

Step 1: Configure the presentation software






Step 2: Connect to your B360 device

Step 3: Make a Presentation

Step 4: Manage the presentation

3.1.1 Step 1: Presentation Software Configuration



Click the connection tab  and access the configuration options below.

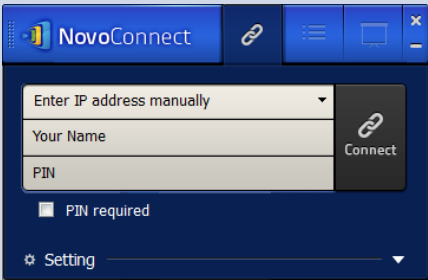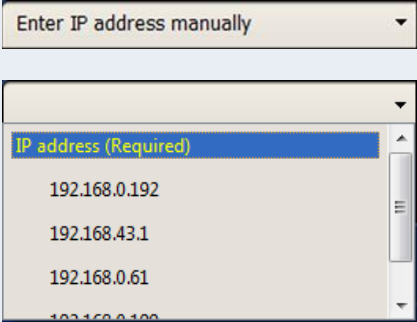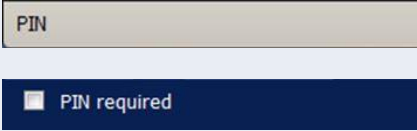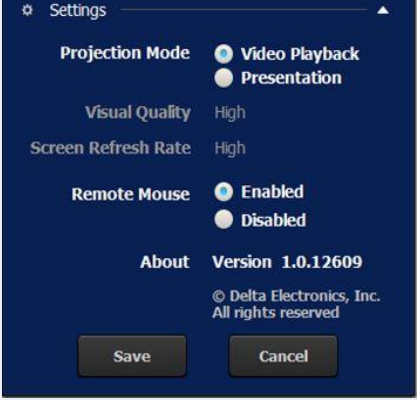Option	Description
	Configure the NovoConnect Desktop Streamer software.
	Manually enter the IP address shown on the NovoConnect home screen, or select an IP address entry from the drop down menu that matches the IP address shown on the NovoConnect home screen.
	(Optional) Manually enter a name for this computer to be viewed in the presentation group among other participants.
	If PIN is required for a presentation group, check the “PIN required” box and enter the four-digit PIN shown on the home screen.
	Click  to expand the Settings tab to access more detailed settings.
	Projection mode: Video Playback: Select this option for a higher frame rate screen mirroring and to turn on audio transmission. Presentation: Select this option for document presentation or browser content presentation. The audio will be automatically set to off. Two additional drop-down configurations, <i>Visual Quality</i> and <i>Screen Refresh Rate</i>, will be enabled. Visual Quality: <i>High:</i> This setting yields the best visual quality but has the longest latency. <i>Normal:</i> This setting is the middle ground between <i>High</i> and <i>Low</i>. <i>Low:</i> This setting yields the lower visual quality but has the shortest latency. Screen Refresh Rate: <i>High:</i> <i>Normal:</i> <i>Low:</i> Remote Mouse: Support mouse event back-channeled from the B360 device to your desktop. About: Software version number of your NovoConnect Desktop

	Streamer. Save and Cancel buttons: You can save your configuration for future presentation.
--	--

3.1.2 Step 2: Connect to your B360 device

Once you are done configuring your NovoConnect Desktop Streamer, you are ready to start or join a presentation group with your B360.

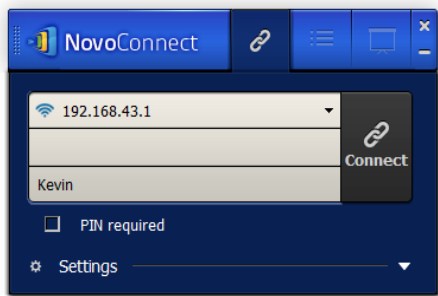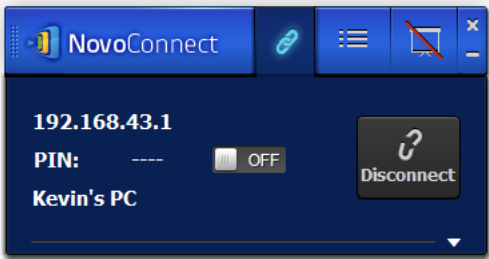Option	Description
	Click the  Connect button. If you are the first participant, this will start a presentation group on your B360. If you are not the first participant, you will be joining a presentation group.
	After your Desktop Streamer is connected successfully to your B360, you will see the connection tab light up . If you are the first participant, you will see that your PC's on-screen display is wirelessly mirrored on your projector or TV.

Please note that your PC screen resolutions may be changed to match projector resolution, and when disconnect from the NovoConnect device, the original screen resolution will be restored. This takes place for all PCs in the same presentation group.

3.1.3 Step 3: Making a Presentation

Once you have started/joined a presentation group you can make a presentation with the contents stored on your PC, local network, or Internet. Your desktop screen will be mirrored to the B360 display regardless the applications you are running on your PC.

Sometimes you may want to write, highlight, mark, video-record, or cut-and-paste portions of your presentation materials directly on the desktop screen. Delta provides a free simple-to-use tool for all of these functions – *NovoScreenote*. You can download the Windows PC or Mac PC versions of *NovoScreenote* from <http://www.deltaww.com/EduSolution>.

3.1.4 Step 4: Presentation Management



3.1.4.1 Role Assignment

There are three roles in a presentation group, namely the *host*, the *presenter*, and the *participant*.

The first *participant* of the presentation is assigned the *host* role for the group. Subsequent joiners are assigned the *participant* role.


The *host* is defaulted to assume the *presenter* role until he handed over the *presenter* role to another *participant*.

To show all current *participants* who have joined the presentation group, click the  tab.

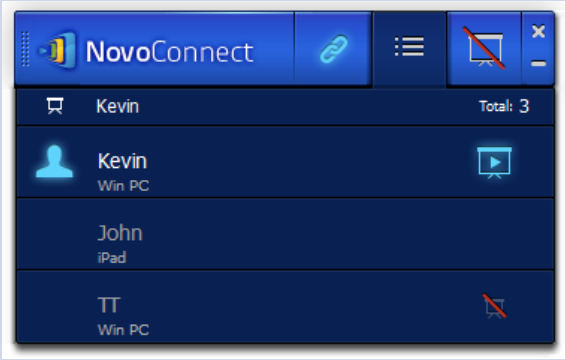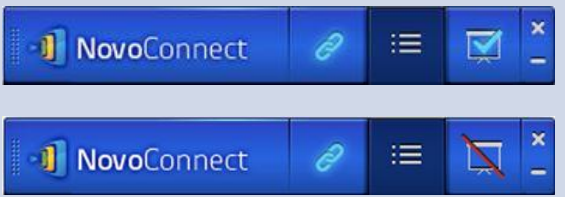Icon	Description
	Click the  tab to show the participant list.  indicates the current Host  indicates the current presenter  indicates a participant who has denied screen preview When no symbol appeared in a participant line, it indicates that the participant is neither the host nor the presenter and has allowed screen preview.
	Indicates the name of the user seen by other <i>participants</i> (in this example: Kevin) and that there are currently a total of 3 participants.
	(For non-host users) Toggle between  and  to accept or deny screen preview by the <i>host</i>, respectively


3.1.4.2 Role Change, Screen Preview, and 4-way Split Screen

Icon	Description
------	-------------

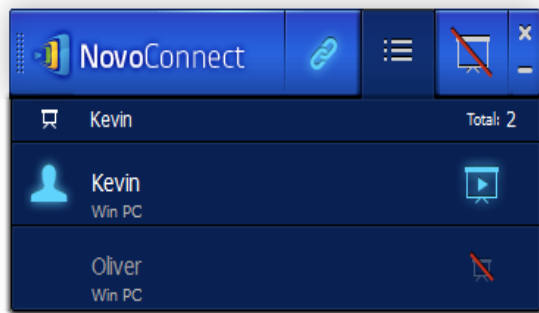

To perform a role change:

Click  tab to show the participant list.

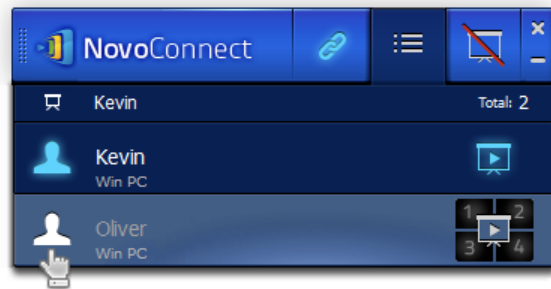


Role Change (continue)

Highlight a participant by moving the cursor onto the targeted participant.

Click on  to hand over the host role to the participant.

Click on  to hand over the presenter role.


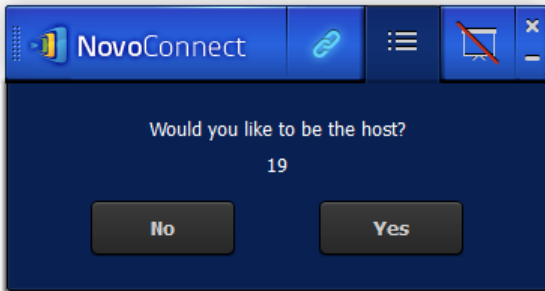


Role Change (continue)

When a participant is asked to be a host, a dialog box will appear on the participant's screen.

When a participant is asked to be a presenter, a dialog box will appear on the participant's screen.


The participant has to click "Yes" to acknowledge accepting the new role in 20 seconds.

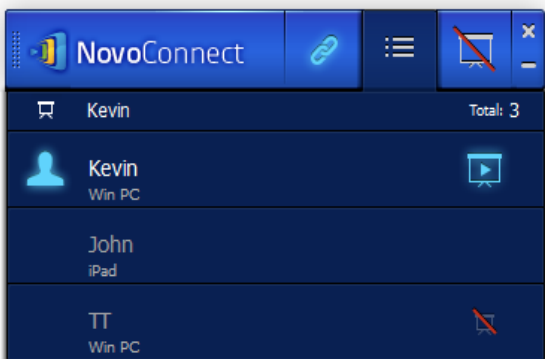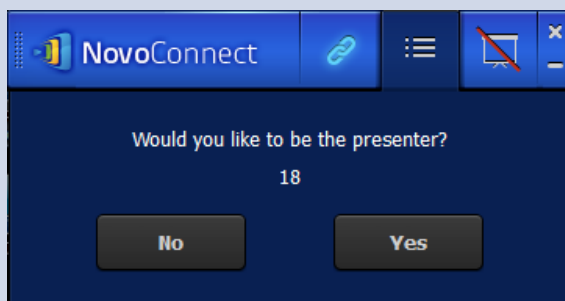

To perform screen preview:

The host clicks  tab to show participant list first.


(Only the host can preview the participant's screen.)

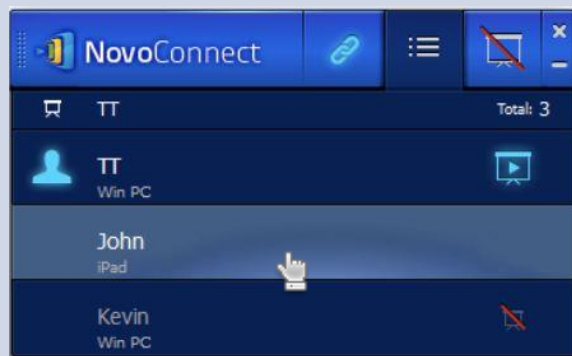

Screen Preview (continue)


John's iPad does not have  symbol, indicating that John allows host previews.

Highlight and click on the middle part of the entry of John.

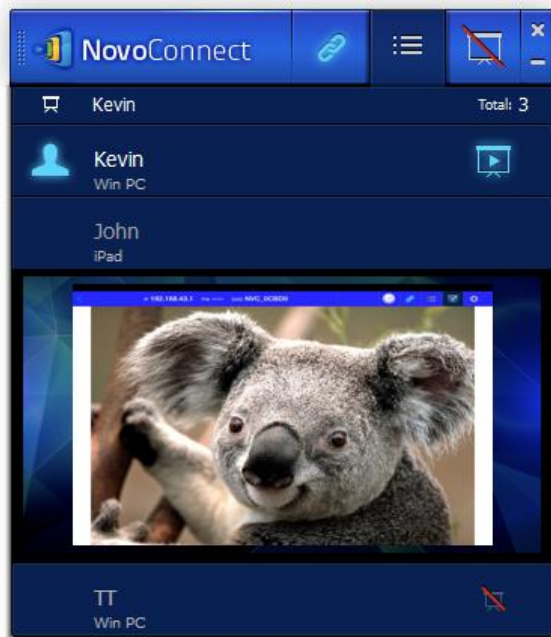


Screen Preview (continue)

The diagram shows the host viewing the screen of John's iPad.

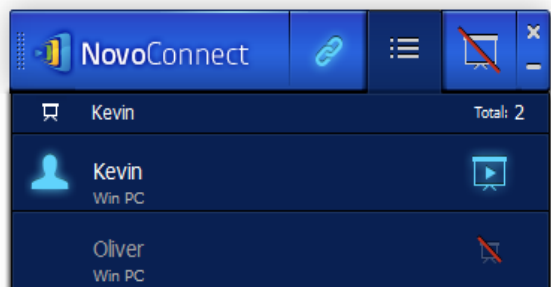

To perform a 4-way split screen presentation:

The host clicks  tab to show participant list.

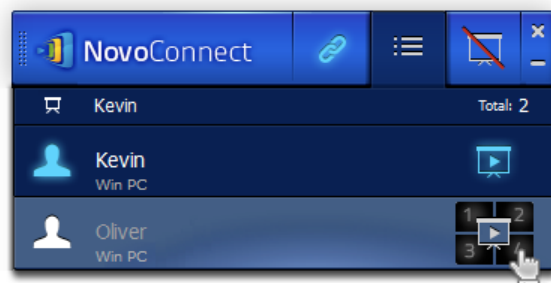


4-way split screen presentation (continue)




1. Move cursor over to highlight participant Oliver.

2. Click on a numbered box  to assign a presenter's on-screen display to the corresponding presentation screen #1-#4. Click the center box to assign a presenter's on-screen display to full screen.

3. You should observe Oliver is being requested to be a presenter on Oliver's Desktop Streamer.

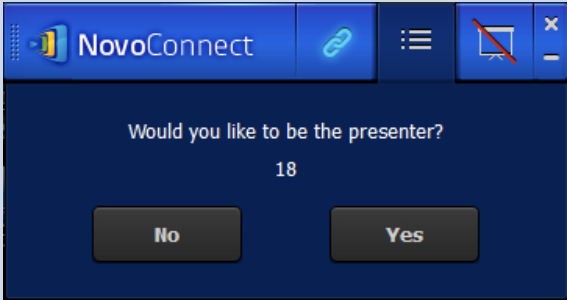
	4-way split screen presentation (continue) 4. Oliver receives a request to assume the presenter role. After Oliver clicks yes to accept being the presenter, Oliver's screen will be presented on one of the four quarters of the 4-way split screen.
---	---

3.1.4.3 Pause, Resume, and Disconnect

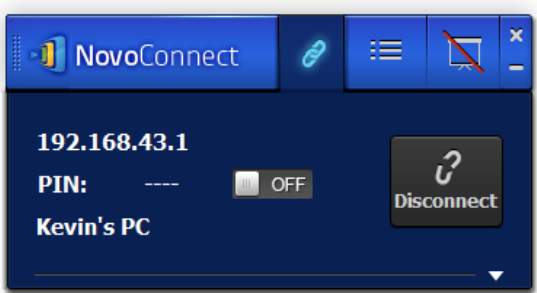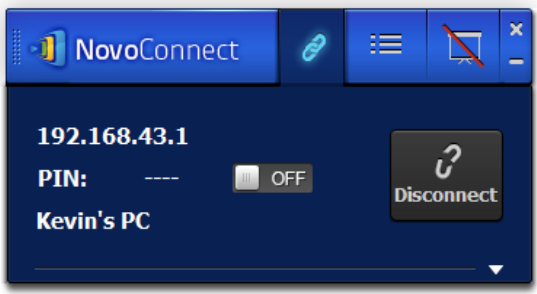Icon	Description
	To Pause/resume a presentation: Click  tab to bring up the presentation control page.
	Pause/Resume (continue) Move your cursor to  tab. Toggle between  and  to pause or resume presentation respectively.
	To disconnect from a presentation group: Click the  button to exit the presentation group. If the <i>host</i> exits a presentation group without handing over the host role, all participants will receive a message prompting them to take over the host role. The first to respond to the prompt will get the <i>host</i> role.

3.1.4.4 Reset

Occasionally you may encounter problems with the network or the computer, causing the presentation group to malfunction on your B360. One way to resolve the problem is to reset the presentation group.

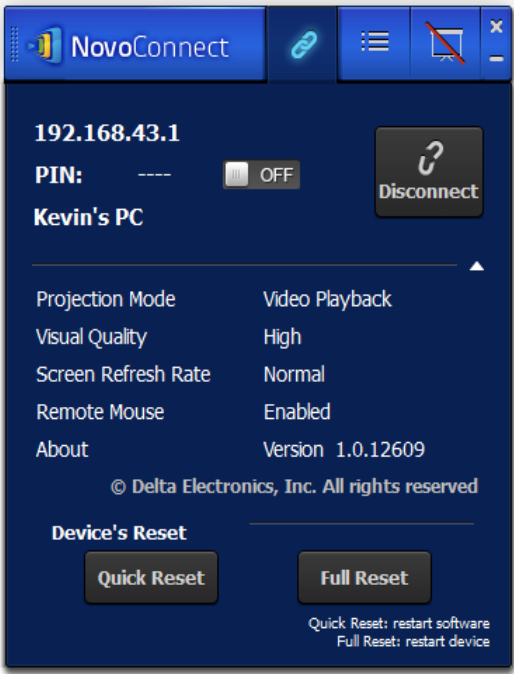Option	Description
	To perform a Reset: Click the  tab to enter the presentation connection control page. Click the  icon to expand the Settings tab to view presentation information and access the <i>Device's Reset</i> buttons.
 The screenshot shows the NovoConnect application window. At the top, there's a title bar with 'NovoConnect' and several icons. Below the title bar, the IP address '192.168.43.1' is displayed. A 'PIN' field with four dashes and an 'OFF' toggle switch are visible. A 'Disconnect' button with a circular arrow icon is on the right. A list of settings includes 'Projection Mode', 'Visual Quality' (set to High), 'Screen Refresh Rate' (Normal), 'Remote Mouse' (Enabled), and 'About' (Version 1.0.12609). At the bottom, under 'Device's Reset', there are 'Quick Reset' and 'Full Reset' buttons. A small text box at the bottom right explains: 'Quick Reset: restart software' and 'Full Reset: restart device'.	Resetting: Click the Quick Reset to reset the presentation group to allow a presentation session to start over again. Click the Full Reset button to reset the NovoConnect B360. The B360 will restart automatically. Conflicts may occur when multiple <i>participants</i> simultaneously attempt to reset the presentation or the B360. The reset privilege priorities are as the following: 1. <i>Host</i>: The <i>host</i> has the sole privilege to reset the presentation group or the B360 when the <i>host</i> stays connected to the B360. 2. <i>Presenter</i>: If the <i>host</i> loses connection with the B360, the current <i>presenter</i> inherits the privilege to reset the presentation group or the B360. 3. <i>Participant</i>: If the <i>host</i> and the <i>presenter</i> both lose connection with the B360, any <i>participant</i> can reset the presentation group or the B360.

3.2 Presenting with iOS Tablet (iPad)

The iOS version of the *NovoPresenter* app (pictured in the image below) enables an iPad device to connect to the B360 and make a presentation.



Launch Presentation Application

Launch the NovoPresenter application by selecting the NovoPresenter app  on your iOS tablet. The NovoPresenter app will be launched.

To make a presentation, you must follow the steps below:

Step 1: Configure the presentation software


Step 2: Connect to your B360 device

Step 3: Make a presentation



Step 4: Manage the presentation

3.2.1 Step 1: Presentation Software Configuration

To configure the presentation software, you first select the NovoPresenter Apps by tapping on the app on your iPad touch screen. A sample screen is provided below.

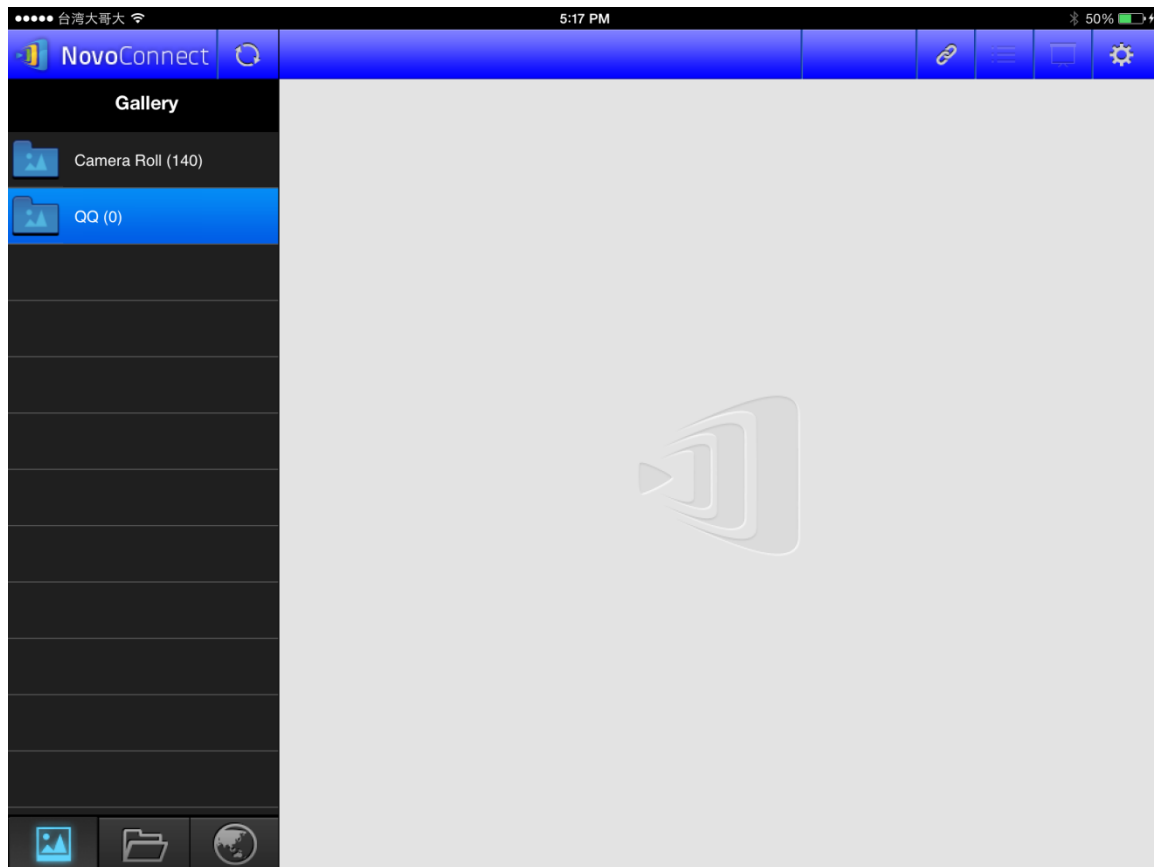


Select the  tab and access the configuration options below.

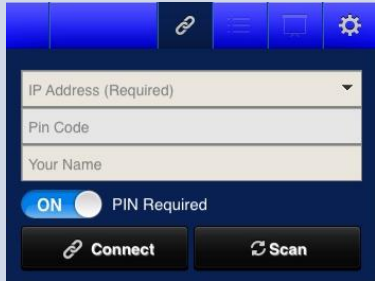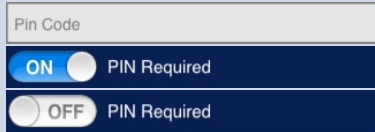Option	Description
	Configure the NovoPresenter app.
	Manually enter the IP address shown on your NovoConnect home screen here, or select an entry from the drop down menu that matches the IP address shown on your NovoConnect home screen. You can touch the Scan button to scan the IP addresses of all available B360s within the same subnet. You can also select the drop down menu to see the available B360s within your area. Example: 192.168.43.1.
	If a PIN code is required to connect to the B360, slide the PIN Required switch to the ON position and enter the PIN shown on the NovoConnect home screen. If the PIN code is not required, slide the PIN Required switch to the OFF position.


Your Name	(Optional) Manually enter a name for this tablet to be identified in the presentation group among other participants. Example: Oliver.
--	---

3.2.2 Step 2: Connect to your B360 device

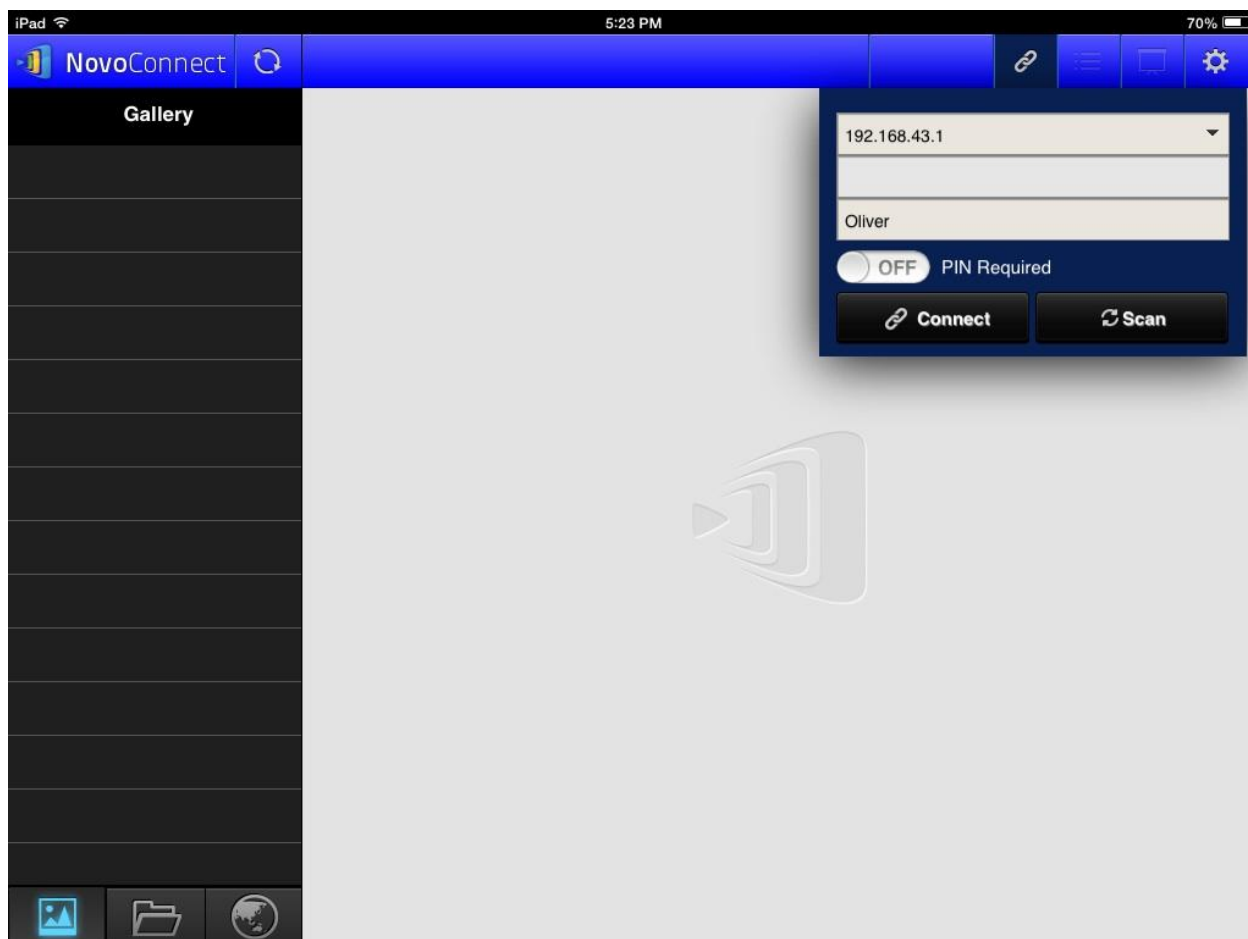

Once you are done configuring your NovoPresenter, you are ready to start or join a presentation group with the B360 box.

Option	Description
	Select the  Connect button. If you are the first participant, this will start a presentation group on your B360. If you are not the first participant, you will be joining a presentation group.
	After your NovoPresenter App on your iPad is connected successfully to your B360, You will see the connection tab light up blue . If you are the first participant, you will see that your iPad's on-screen display is wirelessly mirrored on your projector or

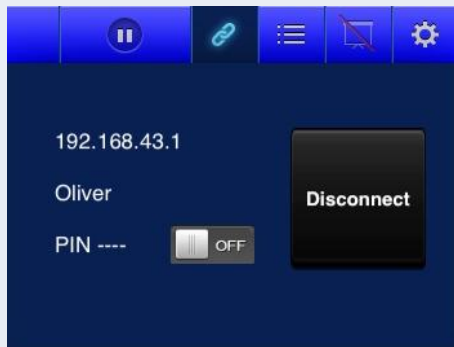

TV. You can also slide the PIN requirement switch to **OFF** or **ON** to disable/enable usage of PIN code.



You can select the  tab to view the participant list. Example: There are a total of six participants in the presentation group. Oliver the host himself is not making a presentation at the moment. He has assigned Kevin, Tom, John, and “turbines-Mac-Books-Pro.local” as the presenters, and each presenter has been numbered from 1 to 4, respectively.

3.2.3 Step 3: Making a Presentation

Once you have started/joined a presentation group you can make a presentation with the contents stored on your iPad, local network, or Internet. There are three tabs on the lower left corner of the NovoPresenter’s home screen:



: Select this tab to present an image stored on your iPad.




: Select this tab to present a document stored on your iPad.



: Select this tab to present a web page.

3.2.3.1 Presenting an Image

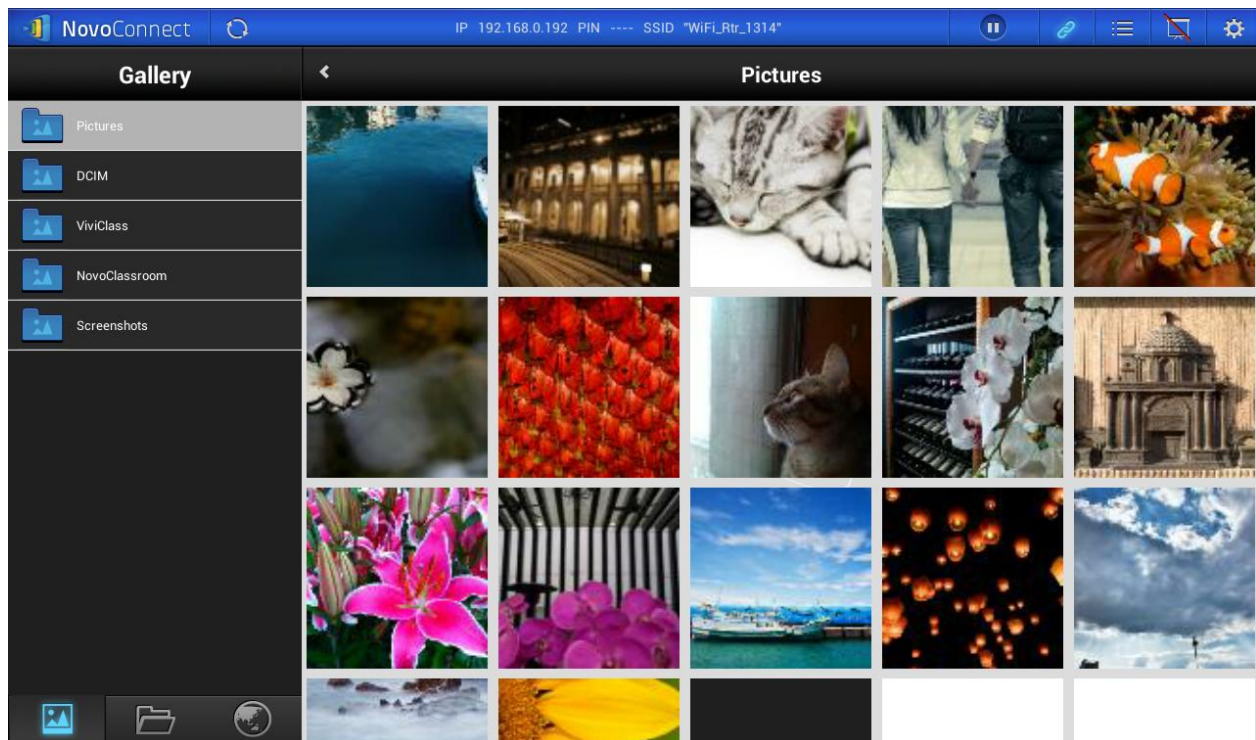

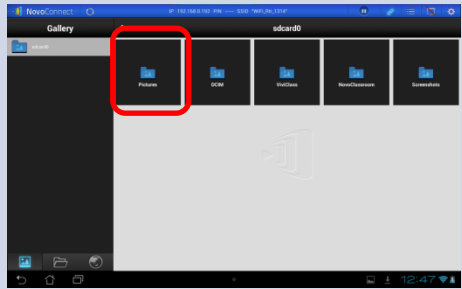
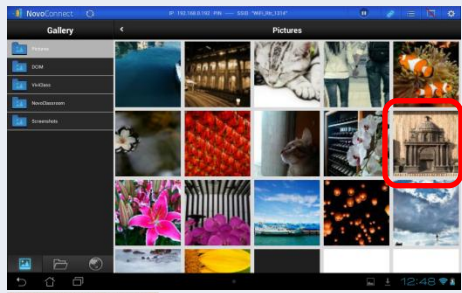
Option	Description
	Navigation: Select the image tab . It will light up blue. Select a folder with images. Example: Select the <i>Pictures</i> folder. Note: You can select the  tab at any time to return to the previous folder.
	Image Thumbnails: Navigate to a folder with images, you will see thumbnails displayed. Select a thumbnail to view the full image. Example: Tap on the ancient building image thumbnail. Note: You can select the  tab at any time to return to the previous folder.




Image Presentation:


The selected image will be displayed in full screen. You can zoom in on the image by sliding two fingers apart, or you can zoom out on the image by sliding two fingers toward each other.




If you have more than one image in the same folder, you can swipe your finger left or right across the screen to advance to the next or previous image.

To return to the *Image Thumbnails* stage, select the  tab. To use the on-screen annotation tools, select the  tab.

3.2.3.2 Presenting a Document

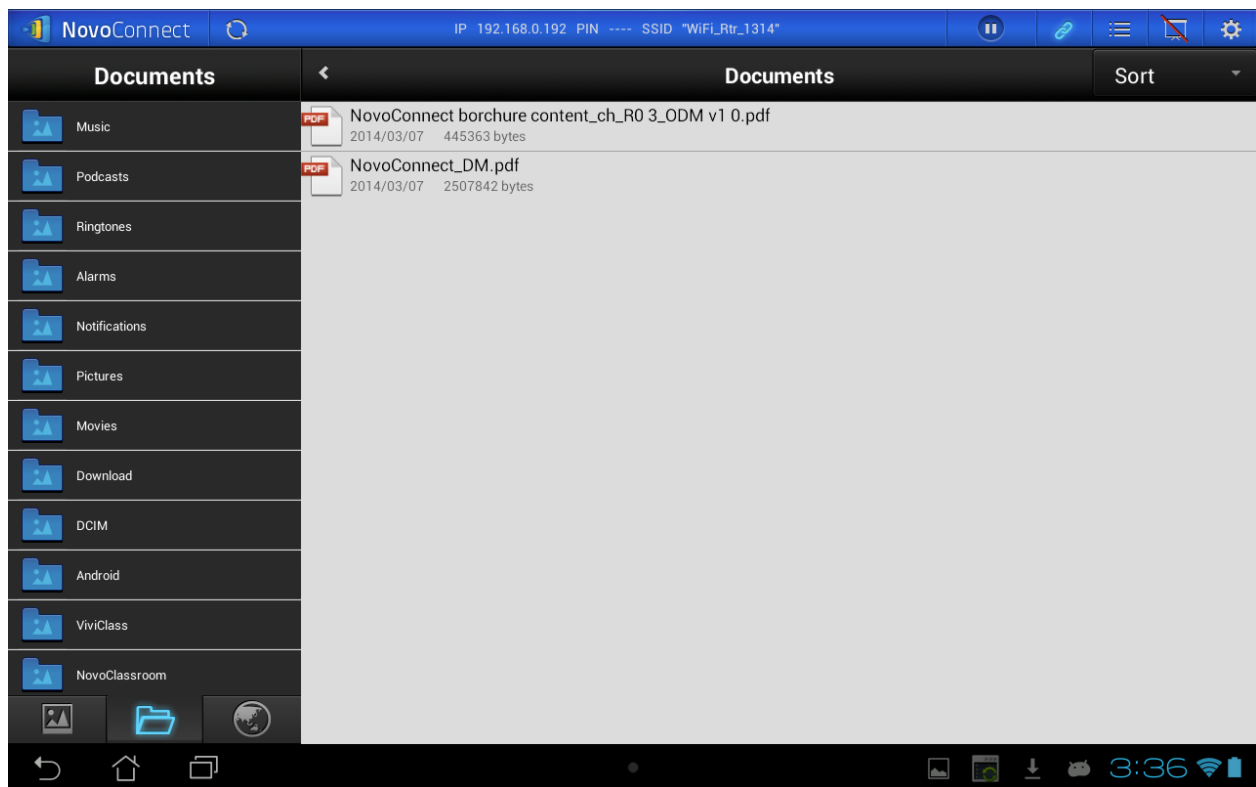


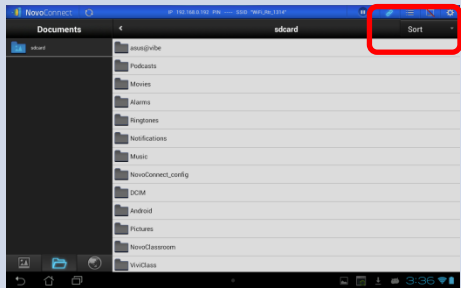Option	Description
	Navigation: Select the folder tab . It will light up blue. Navigate to a folder with MS office or pdf documents. If you wish to sort the folder list with a desired order, touch the drop-down menu Sort, then select one of the following options: - Sort by Size - Sort by Name - Sort by Update (default) - Sort by Type Example: Touch the Sort drop-down menu. Touch

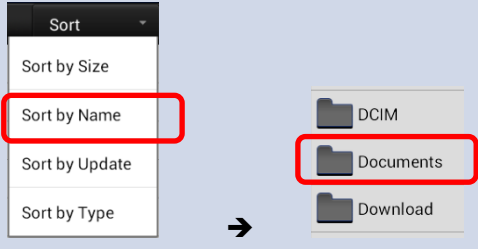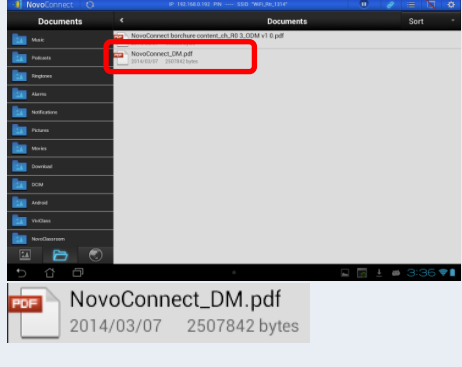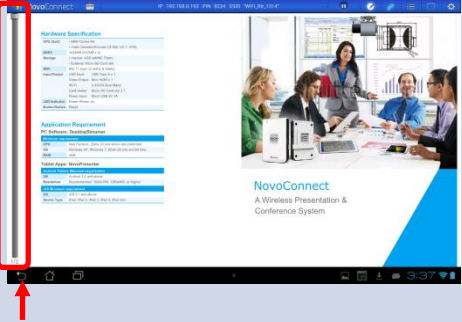	the option <i>Sort by Name</i> and then touch the <i>Documents</i> folder. Note: You can touch the  tab at any time to return to the previous folder.
	Document List: After you have found a folder with documents supported by NovoPresenter, touch the document of interest. Example: Touch the document “NovoConnect_DM.pdf”.
 Scroll Bar	Document Presentation: The selected document will be displayed in full screen. You can zoom in on the document by sliding two fingers apart, or you can zoom out on the document by sliding two fingers toward each other. To scroll down or move to the next page, slide your finger up or drag the scroll bar down. To scroll up or move to the previous page, slide your finger down or drag the scroll bar up. To return to the <i>Document List</i> stage, touch the  tab. To use the on-screen annotation tools, touch the  tab.

3.2.3.3 Presenting with a Browser


Option	Description
	Select your B360 WiFi Setting If the web page you are presenting is not in the local storage of your B360, you need to set your B360's Wi-Fi mode to Client Mode. You will need to have a WiFi AP in your environment providing network access to the web pages you are interested in accessing and adding to your presentation.

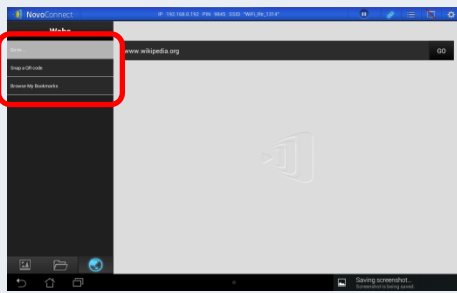

Start Browsing for a Web Page:

Touch the internet tab . It will light up blue. Select one of the three options to choose a web page:

- Go to ... (default)
- Snap a QR code
- Browse My Bookmarks

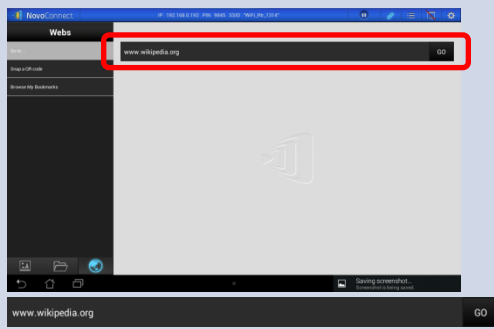


Go to ...:

Touch the **Go to ...** tab.

Enter the web page URL and touch **Go**.


Example: Enter the URL www.wikipedia.org and touch **Go**.

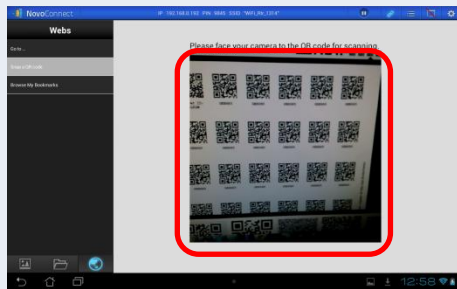

Snap a QR code:

Touch the **Snap a QR code** tab.

Aim your tablet's camera to a QR code containing web page information. NovoPresenter will detect the URL and access the corresponding web page.

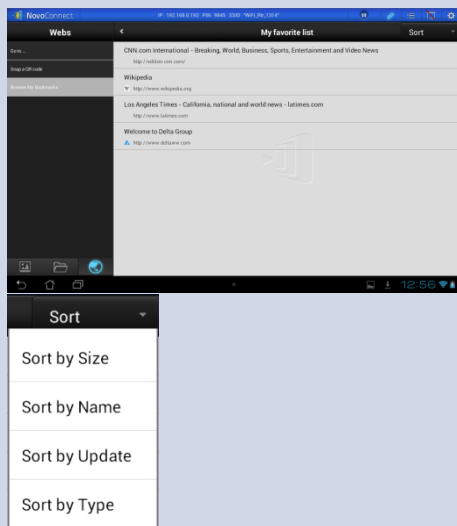

Browse My Bookmarks:

Touch the **Browse My Bookmarks** tab.

From the bookmark list, touch a bookmark of interest to go to its corresponding web page.

Touch and hold a bookmark for two seconds to edit or delete that bookmark.

If you wish to sort the bookmark list with a desired order, touch the drop-down menu **Sort**, then select one of the following options:

- Sort by Size
- Sort by Name
- Sort by Update (default)
- Sort by Type

Note: The bookmark list may initially be empty. You can add a web page to the bookmark list at any time while browsing and presenting web pages.



Web Page Presentation:

The selected web page is displayed in full screen.

You can zoom in on the web page by sliding two fingers apart, or you can zoom out on the web page by sliding two fingers toward each other.

To scroll down or move to the next page, slide your finger up. To scroll up or move to the previous page, slide your finger down.

To add this web page to the bookmark list, touch the  tab.

To return to the *Start Browsing for a Web Page*, touch the  tab. To use the on-screen annotation tools, touch the  tab.


3.2.3.4 Annotation

Sometimes you may want to write, highlight, or mark portions of your presentation materials directly on the tablet screen. The NovoPresenter provides an on screen annotation tool for the presenter to annotate directly on the presentation material without changing the original file.

You can enable the annotation tool  by toggling the  tab as shown in the screen shot below.




Icon	Description
------	-------------

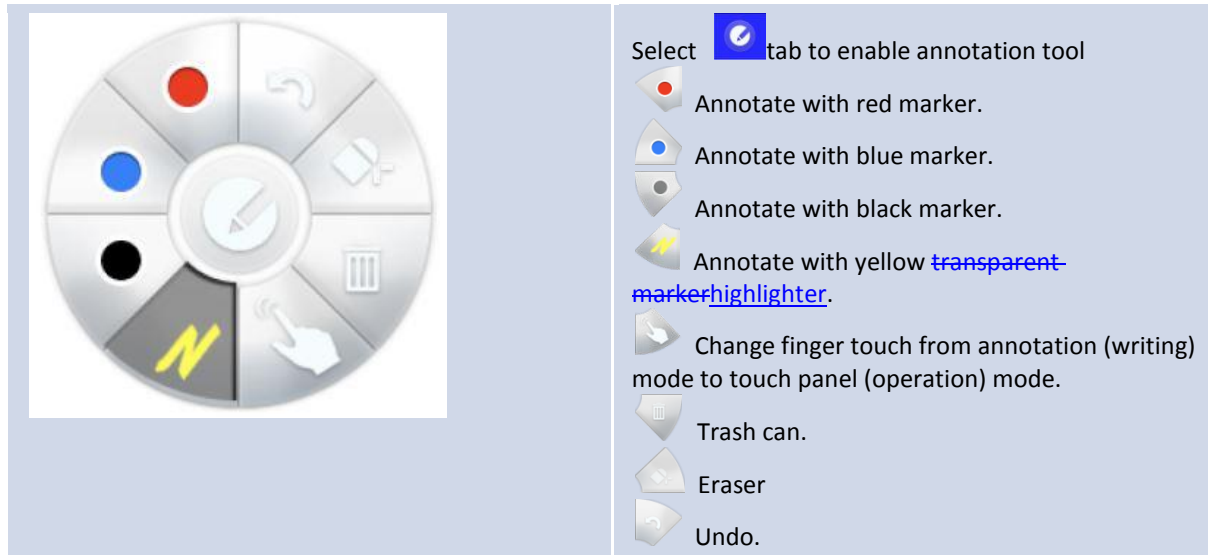

3.2.4 Step 4: Presentation Management

Once you are done starting/joining a presentation group, you are ready to make a presentation and collaborate with other participants. A sample screen view is provided below.

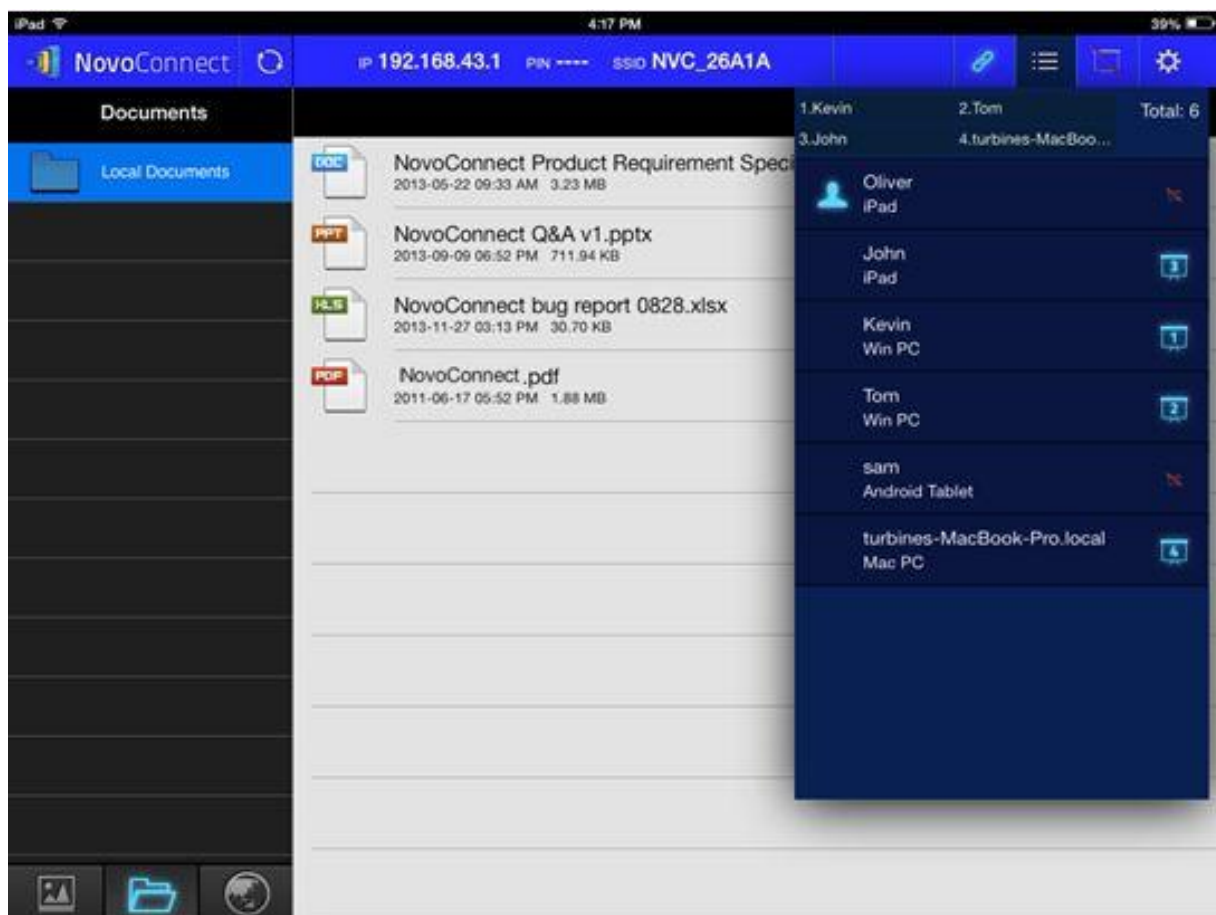


3.2.4.1 Role Assignment

There are three roles in a presentation group, the *host*, the *presenter*, and the *participant*.



The first *participant* to start the presentation group with a B360 is assigned the *host* role. Subsequent joiners are assigned the *participant* role.


The *host* is defaulted to assume the *presenter* role until he assigns the *presenter* role to another *participant*.

To show all current participants who have joined the presentation group, please touch the  tab.

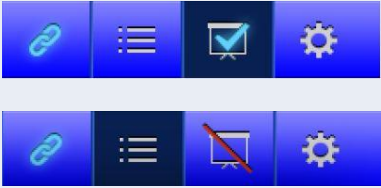Option	Description
	Select  tab to show participant list.  Indicates the current <i>host</i>.  Indicates the current <i>presenter</i>.  Indicates a <i>participant</i> who has denied screen preview.  indicates the current <i>presenter</i> that is presenting in the indicated split-screen Box number (#1-#4) (the instance here shows a <i>presenter</i> that is presenting in Box #1). Example: There are six <i>participants</i> in the presentation session – two with iPads, two with Windows PCs, one with an Android tablet, and one with a Mac PC. Oliver is the <i>host</i> who has denied screen preview. Sam is a <i>participant</i> who has denied screen preview. Kevin, Tom, John, and “turbines-Mac-Book-Pro.local” are <i>presenters</i> currently presenting in Box #1-4 of the 4-way split screen (which will be explained in detail later).
	(For non-host users) Toggle between  and  to accept or deny screen preview by the <i>host</i>, respectively.

3.2.4.2 Role Change, Screen Preview, and 4-way Split Screen

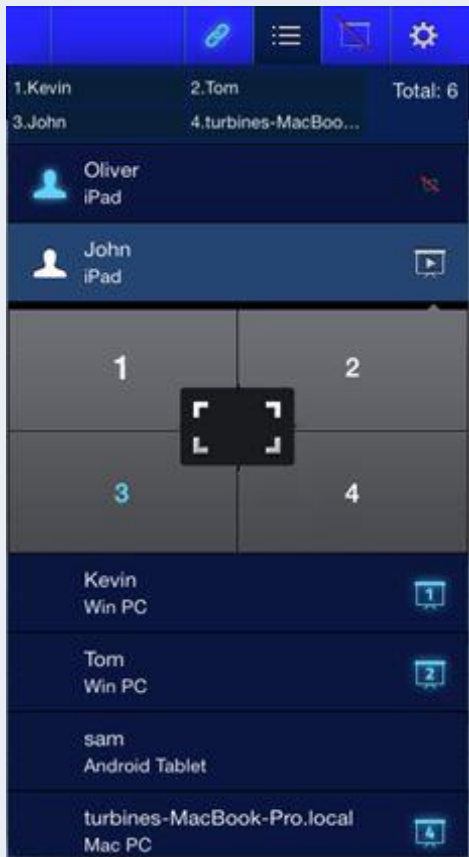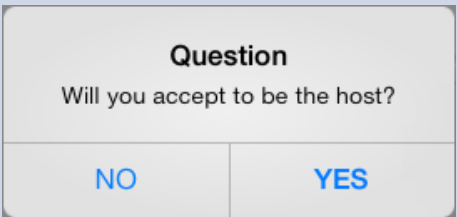Option	Description
	To perform a Role Change: First select the  tab to show the user list.
	Role Change: Highlight <i>participant</i> John (example name) by touching the middle part of John's entry once or twice until both the  and the  icons appear. Touch John's  icon to hand over the <i>host</i> role to him. If the split screen selection area  is not yet present, touch the  icon to bring up the split screen selection area. Touch the  icon of the split screen selection area to request John to be the sole presenter. Touch one of the four boxes (#1-4) in the split screen selection area to assign John to perform a presentation on one of the four boxes of the 4-way split screen.
	Role Change: When a <i>participant</i> is asked to be a <i>host</i>, a dialog box will appear on the participant's screen. The <i>participant</i> has 20 seconds to touch the Yes button to become the new <i>host</i> or touch the No button to reject the <i>host</i> assignment.

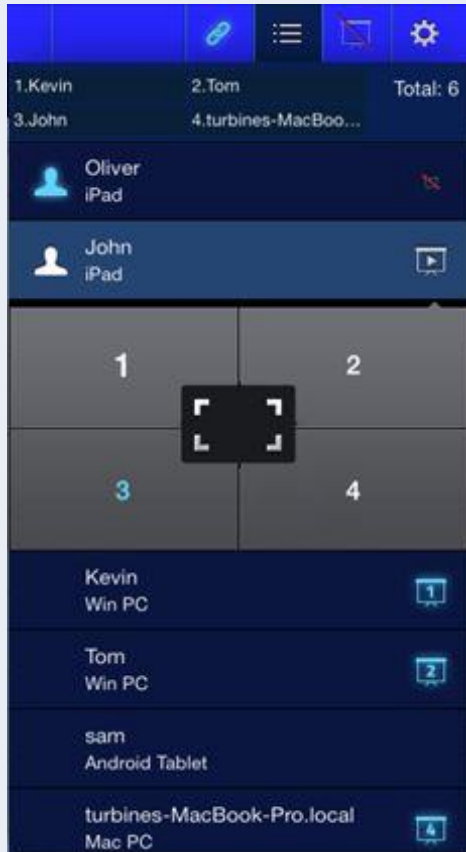

To perform Screen Preview:

Touch the  tab to show the participant list. The *participant* Sam (example name) does not have a  icon, indicating that he allows screen preview.



Screen Preview:


Highlight Sam by touching the middle part of his entry to preview his device's on-screen display once or twice until both the  and the  icons appear.



To perform a 4-way split screen presentation:

Touch the  tab to show the participant list.

Select a *participant* to make a presentation. In this example, John (example name) will be selected by touching his entry.

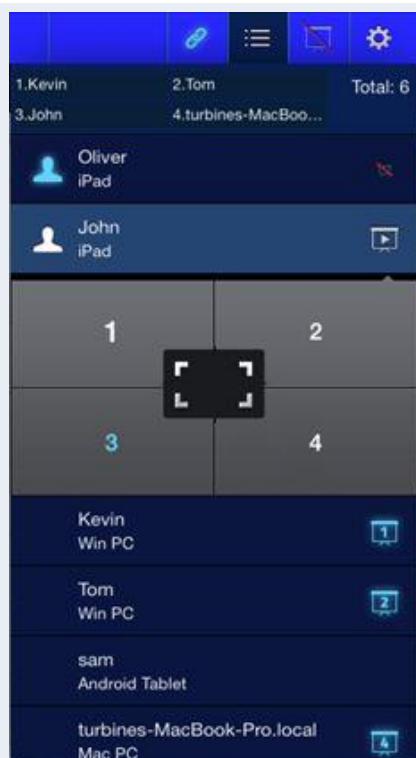

4-way Split Screen Presentation:

Touch John's entry once or twice until both the



and the



icons appear. If the split

screen selection area  is not yet

present, touch the  icon to bring up the split screen selection area.

Touch one of the four boxes (#1-4) in the split screen selection area to assign John to perform a presentation on one of the four boxes of the 4-way split screen.

In this example, John is assigned to make a presentation in Box #3.

Question

Do you want to be presenter?




NO
YES

4-way Split Screen Presentation:

John will receive a request to perform a presentation on one of the four boxes of the 4-way split screen.


After John accepts (within 20 seconds) being one of the four possible presenters (by touching the **Yes** button), John's screen will appear on one of the four boxes of the 4-way split screen.

3.2.4.3 Pause, Resume, and Disconnect

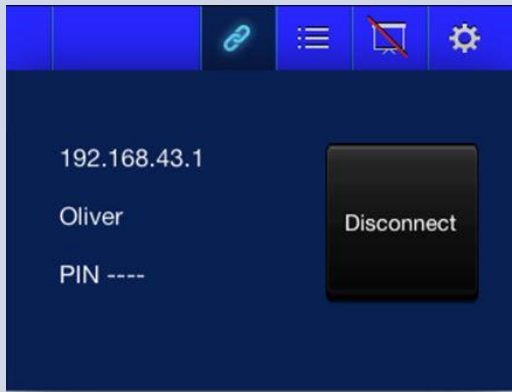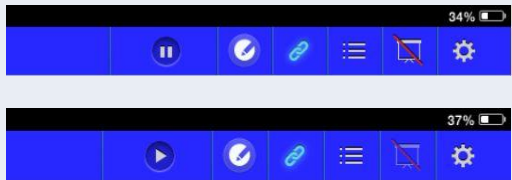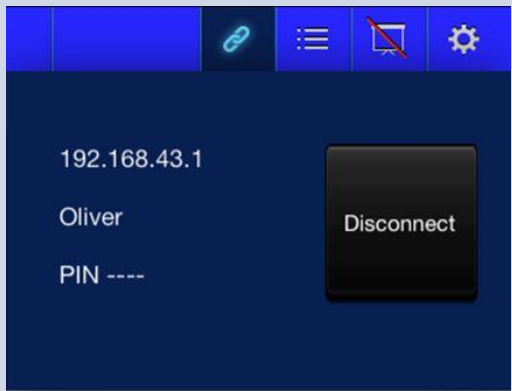Icon	Description
	Click  tab to bring to the presentation control page.
	While presenting, the presenter toggle between  and  to pause and resume presentation respectively.
	Select  button to exit from the presentation session. If the host exit presentation session without handing over the host role, all participants will receive a message to prompt them to take over the host role. The first to respond to the prompt will get the host role.

3.2.4.4 Reset

Occasionally you may encounter problems with the network or the computer, causing the presentation group to malfunction on your B360. One way to resolve this problem is to reset the presentation group.

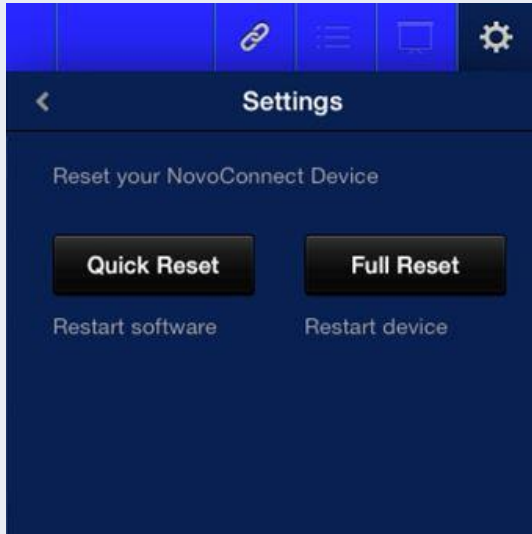Option	Description
	To perform a Reset: First touch the  tab and touch the  arrow of Device Reset.
	Resetting: Touch the Quick Reset to reset the presentation group to allow a presentation session to start over again. Touch the Full Reset button to reset the NovoConnect B360. The B360 will restart automatically. Conflicts may occur when multiple <i>participants</i> simultaneously attempt to reset the presentation or the B360. The reset privilege priorities are as the following: 1. <i>Host</i>: The <i>host</i> has the sole privilege to quick-reset the presentation group when the <i>host</i> stays connected to the B360. 2. <i>Presenter</i>: If the <i>host</i> loses connection with the B360, the current <i>presenter</i> inherits the privilege to quick-reset the B360. 3. <i>Participant</i>: If the <i>host</i> and the <i>presenter</i> both lose connection with the B360, any <i>participant</i> can quick-reset the presentation group.

3.3 Presenting with Android Tablet

The Android version of the *NovoPresenter* app (pictured in the image below) enables an Android tablet device to connect to the B360 and make a presentation.



Launch Presentation Application

Launch the NovoPresenter application by selecting the NovoPresenter app icon  on your Android tablet. The NovoPresenter app will be launched.

To make a presentation, you must follow the steps below:

Step 1: Configure the presentation software


Step 2: Connect to your B360 device

Step 3: Make a presentation




Step 4: Manage the presentation

3.3.1 Step 1: Presentation Software Configuration

To configure the presentation software, you first select the NovoPresenter Apps by tapping on the apps on your Android touch screen. A sample screen is provided below.

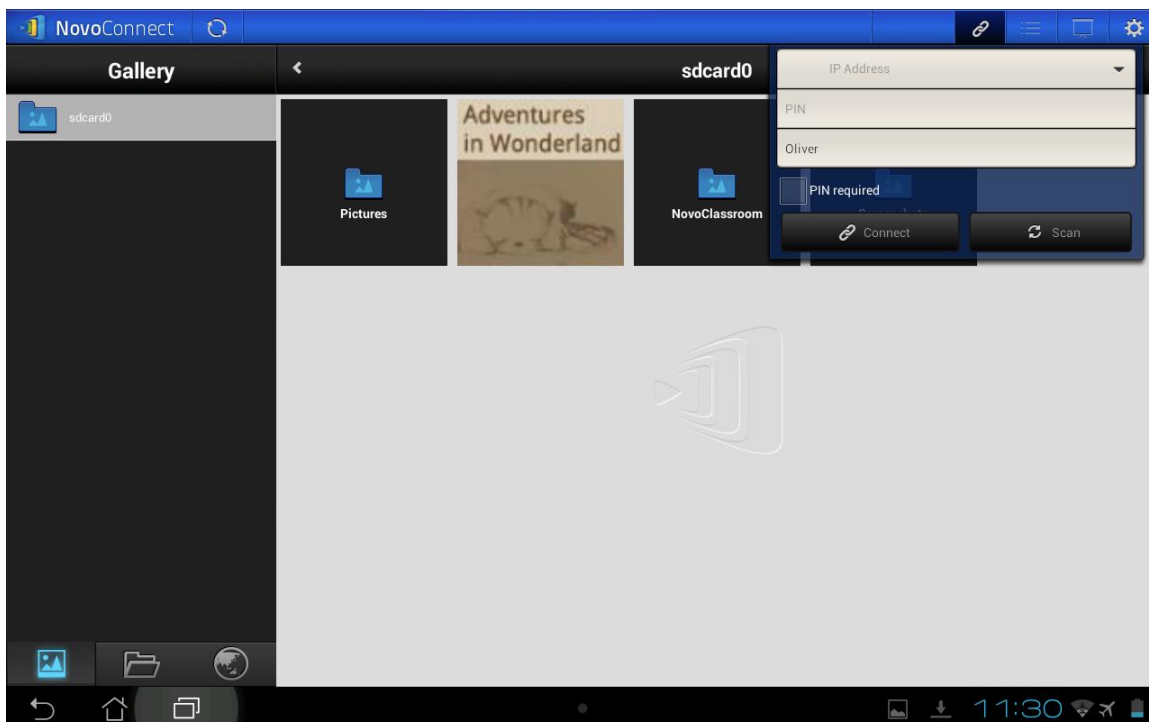




Touch the  tab and access the configuration options below.

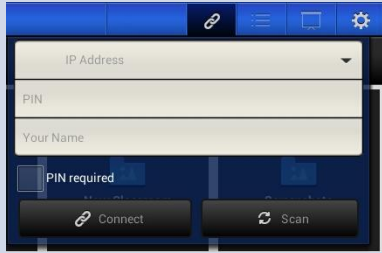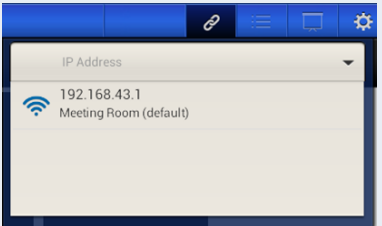Option	Description
	Configure the NovoPresenter app.
	Manually enter the IP address shown on your NovoConnect home screen here, or select an entry from the drop down menu that matches the IP address shown on your NovoConnect home screen. You can also touch the Scan button to scan the IP addresses of all available B360s within the same subnet. Select the drop down menu to see the available B360s within your area. Example: 192.168.43.1.
	If a PIN code is required to connect to the B360, check the PIN Required check box and enter the PIN shown on the NovoConnect home screen. If the PIN code is not required, uncheck the PIN Required check box.
	(Optional) Manually enter a name for this tablet to be identified in the presentation session among other participants. Example: Oliver.

3.3.2 Step 2: Connect to your B360 device

Once you are done configuring your NovoPresenter, you are ready to start or join a presentation group with the B360 box.

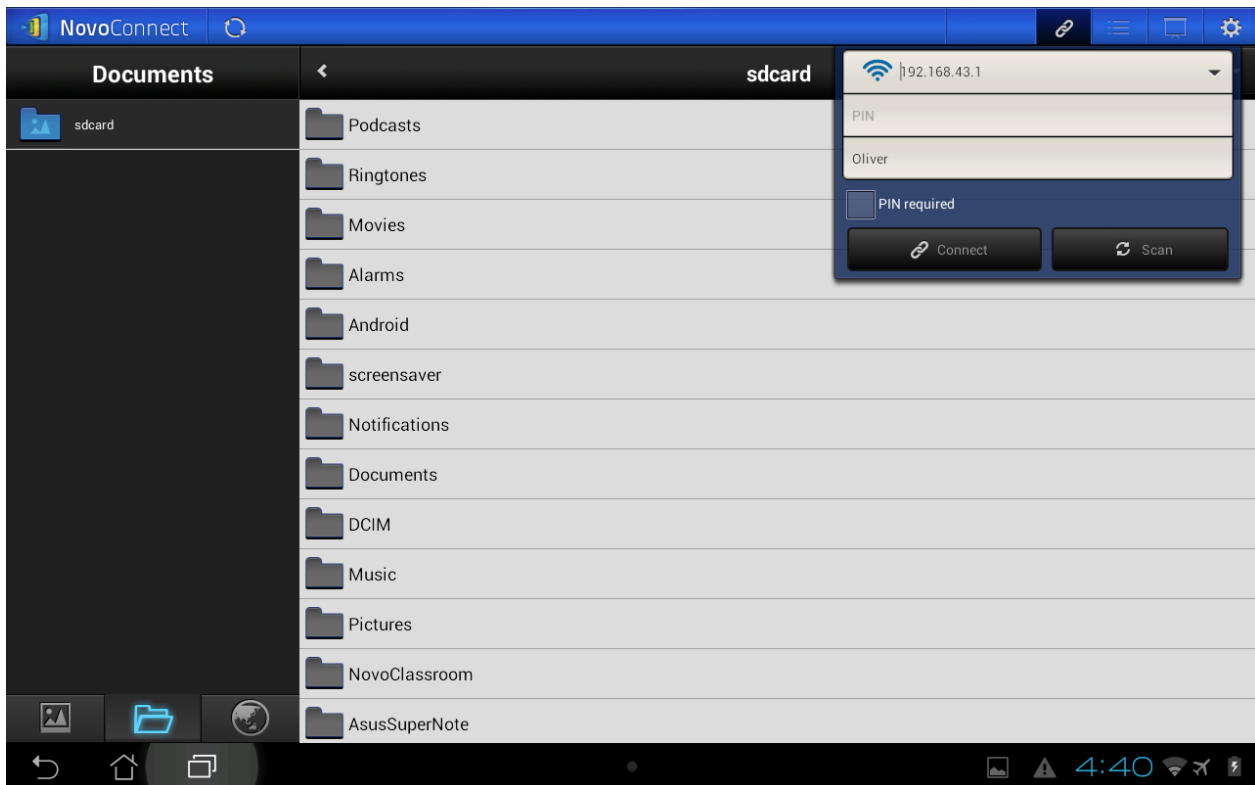

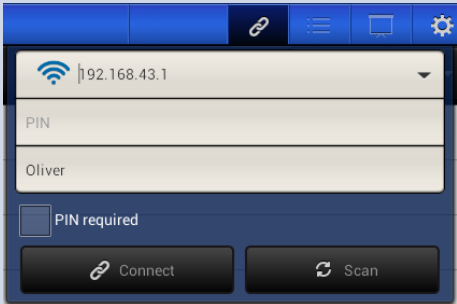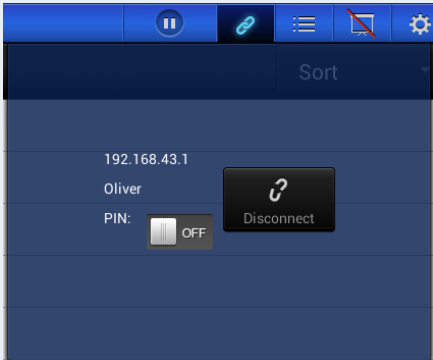Option	Description
	Touch the  button. If you are the first participant, this will start a presentation group on your B360. If you are not the first participant, you will be joining a presentation group.
	After your NovoPresenter App on your Android tablet is connected successfully to your B360, You will see the connection tab light up in blue . If you are the first participant, you will see that your Android tablet's on-screen display is wirelessly mirrored on your projector or TV. You can also slide the PIN requirement switch to OFF or ON to disable or enable usage of PIN code.



You can touch the  tab to see the current participant list. Example: There are a total of six *participants* in the presentation group. Oliver the *host* himself is not making a presentation at the moment because he has assigned John, Kevin, Tom, and “turbines-Mac-Books-Pro.local” as the four *presenters*.

3.3.3 Step 3: Making a Presentation

Once you have started/joined a presentation group you can make a presentation with the contents stored on your tablet, local network, or the Internet. There are three tabs on the lower left corner of the NovoPresenter’s home screen:



: Select this tab to present an image stored on your tablet.




: Select this tab for presenting a document stored on your iPad.



: Select this tab for presenting a web page.

3.3.3.1 Presenting an Image

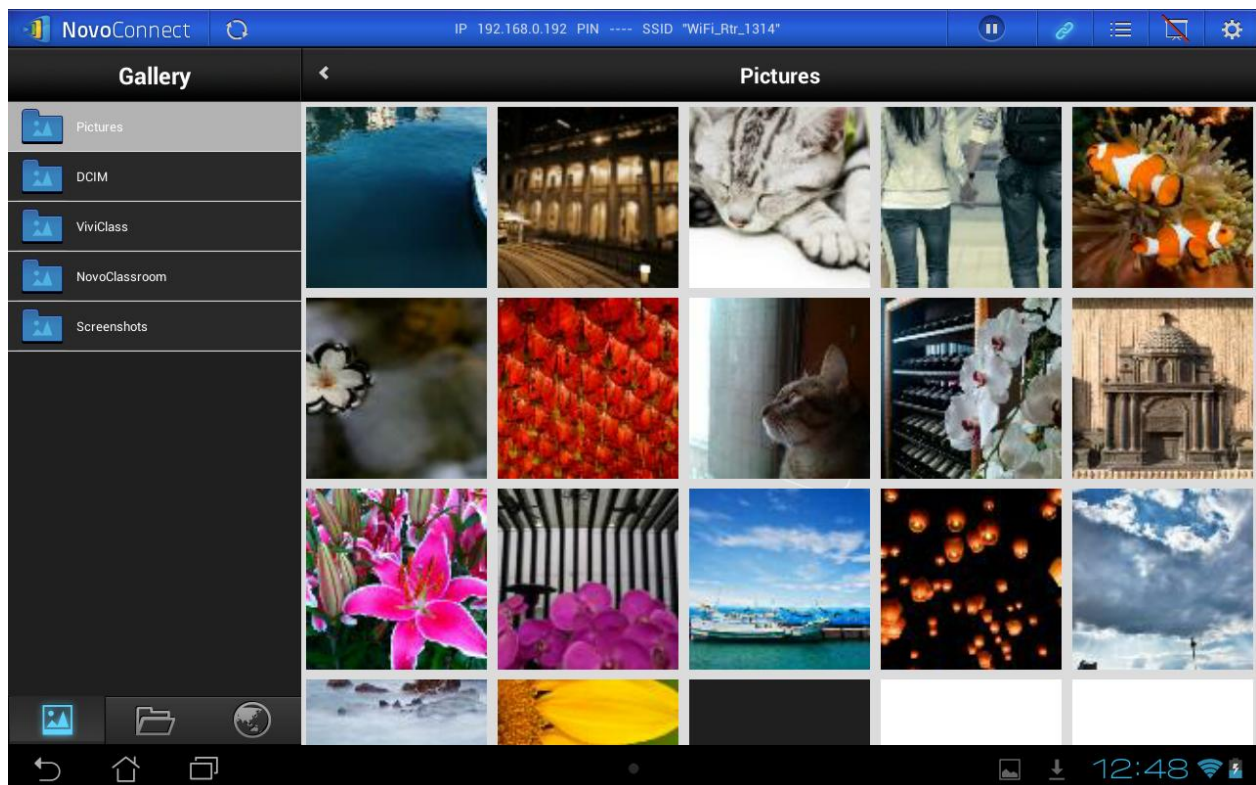

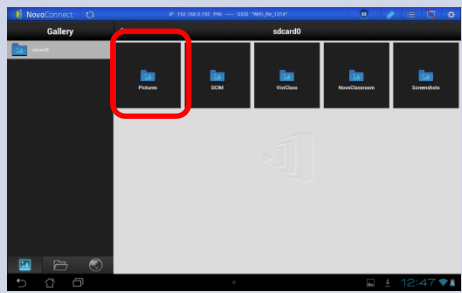
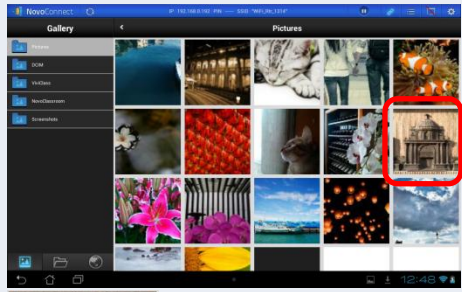
Option	Description
	Browse: Touch the image tab . It will light up blue. Browse a folder with images. Example: Touch the <i>Pictures</i> folder. Note: You can touch the  tab at any time to return to the previous folder.
	Image Thumbnails: After you have found a folder with the images you desire, touch an image thumbnail to view the image. Example: Touch the ancient building image thumbnail. Note: You can touch the  tab at any time to return to the previous folder.




Image Presentation:

The selected image is fully displayed. You can zoom in on the image by sliding two fingers apart, or you can zoom out on the image by sliding two fingers toward each other.


If you have more than one image in the same folder, you can slide your finger left or right across the screen to advance to the next or previous image. To return to the *Image Thumbnails* stage,

touch the  tab. To use the on-screen annotation tools, touch the  tab.

3.3.3.2 Presenting a Document

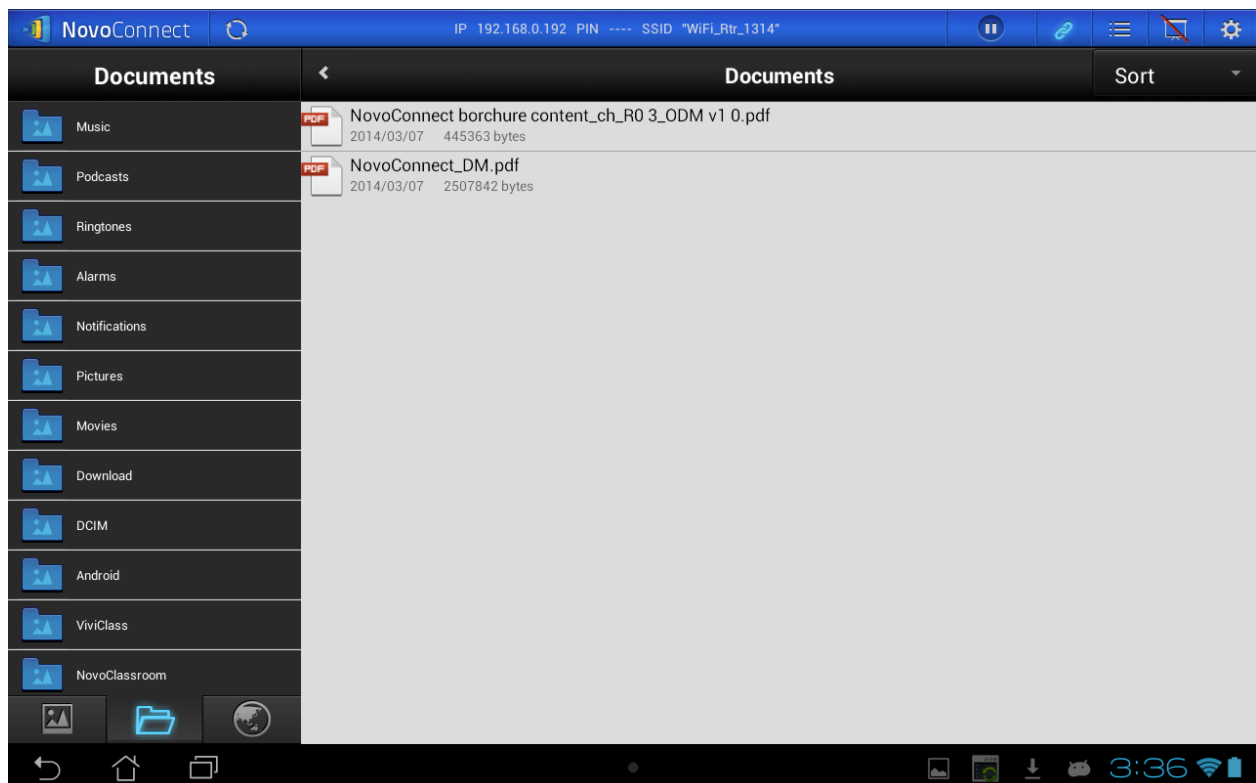

Option

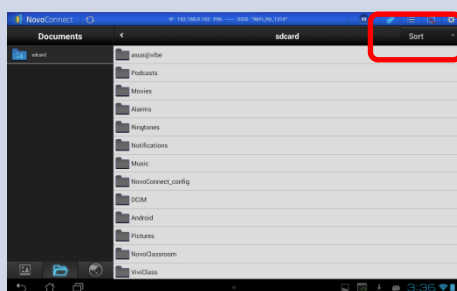



Description

Browse:

Touch the folder tab . It will light up blue. Browse a folder with documents. If you wish to sort the folder list with a desired order, touch the drop-down menu **Sort**, then select one of the following options:


- Sort by Size
- Sort by Name
- Sort by Update (default)
- Sort by Type

Example: Touch the **Sort** drop-down menu. Touch the option *Sort by Name*, then touch the *Documents* folder.

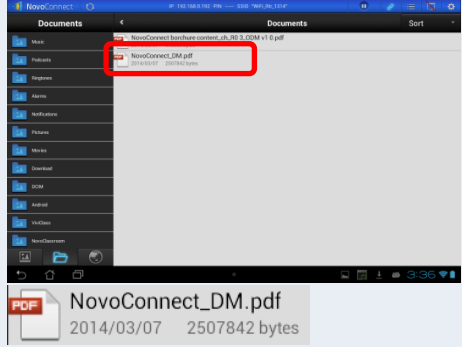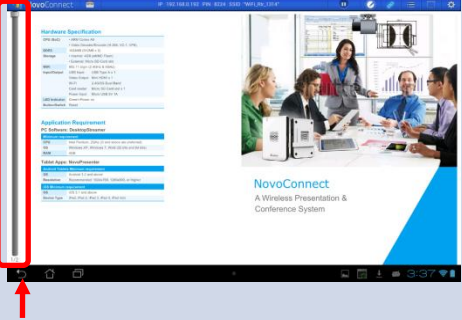	Note: You can touch the  tab at any time to return to the previous folder.
	Document List: After you have found a folder with documents supported by NovoPresenter, touch the document of interest. Example: Touch the document “NovoConnect_DM.pdf”. Note: You can touch the  tab at any time to return to the previous folder.
 Scroll Bar	Document Presentation: The selected document is fully displayed. You can zoom in on the document by sliding two fingers apart, or you can zoom out on the image by sliding two fingers toward each other. To scroll down or move to the next page, slide your finger up or drag the scroll bar down. To scroll up or move to the previous page, slide your finger down or drag the scroll bar up. To return to the <i>Document List</i> stage, touch the  tab. To use the on-screen annotation tools, touch the  tab.

3.3.3.3 Presenting with a Browser


Option	Description
	Set Your B360 to Client Mode: If the web page you are presenting is not in the local storage of your B360, you need to set your B360's Wi-Fi mode to Client Mode. You will need to have a WiFi AP in your environment providing network access to the web pages you are interested in accessing and adding to your presentation.

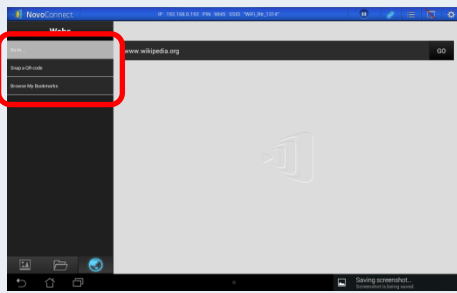

Start Browsing for a Web Page:

Touch the internet tab . It will light up blue. Select one of the three options to choose a web page:

- Go to ... (default)
- Snap a QR code
- Browse My Bookmarks

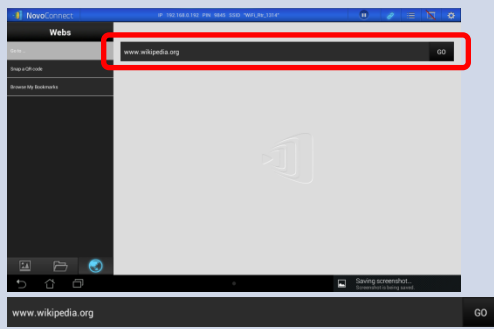


Go to ...:

Touch the **Go to ...** tab.

Enter the web page URL and touch **Go**.


Example: Enter the URL www.wikipedia.org and touch **Go**.

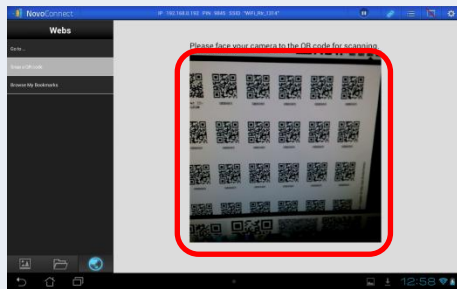

Snap a QR code:

Touch the **Snap a QR code** tab.

Aim your tablet's camera to a QR code containing web page information. NovoPresenter will detect its URL and go to the corresponding web page.

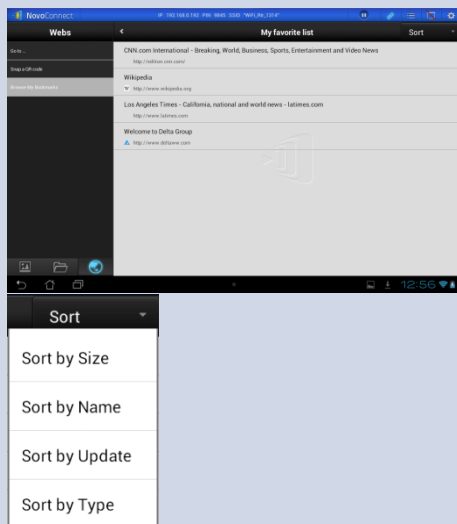

Browse My Bookmarks:

Touch the **Browse My Bookmarks** tab.

From the bookmark list, touch a bookmark of interest to go to its corresponding web page.

Touch and hold a bookmark for two seconds to edit or delete that bookmark.

If you wish to sort the bookmark list with a desired order, touch the drop-down menu **Sort**, then select one of the following options:

- Sort by Size
- Sort by Name
- Sort by Update (default)
- Sort by Type

Note: The bookmark list may initially be empty. You can add a web page to the bookmark list at any time during the *web page presentation* stage.



Web Page Presentation:

The selected web page is fully displayed. You can zoom in on the web page by sliding two fingers apart, or you can zoom out on the web page by sliding two fingers toward each other.

To scroll down or move to the next page, slide your finger up. To scroll up or move to the previous page, slide your finger down.

To add this web page to the bookmark list, touch the  tab.

To return to the *Start Browsing for a Web Page* stage, touch the  tab. To use the on-screen annotation tools, touch the  tab.


3.3.3.4 Annotation

Sometimes you may want to write, highlight, or mark portions of your presentation materials directly on the tablet screen. The NovoPresenter provides an on screen annotation tool for the presenter to annotate directly on the presentation material without changing the original file.

You can enable the annotation tool  by toggling the  tab as shown in the screen shot below.




Icon	Description
------	-------------

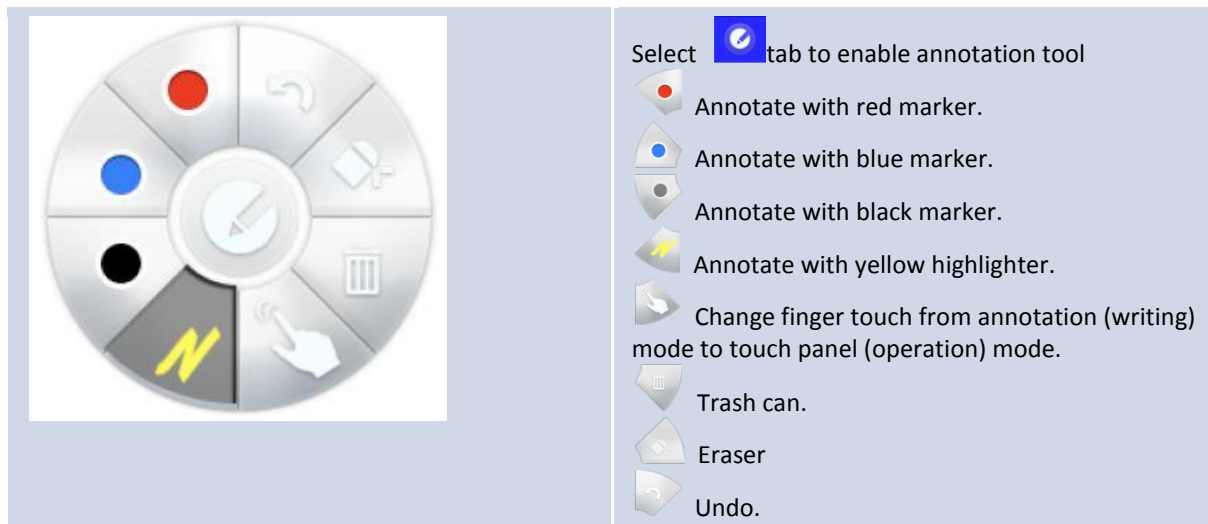

3.3.4 Step 4: Presentation Management

Once you are done starting/joining a presentation group, you are ready to make a presentation and collaborate with other participants. A sample screen view is provided below.

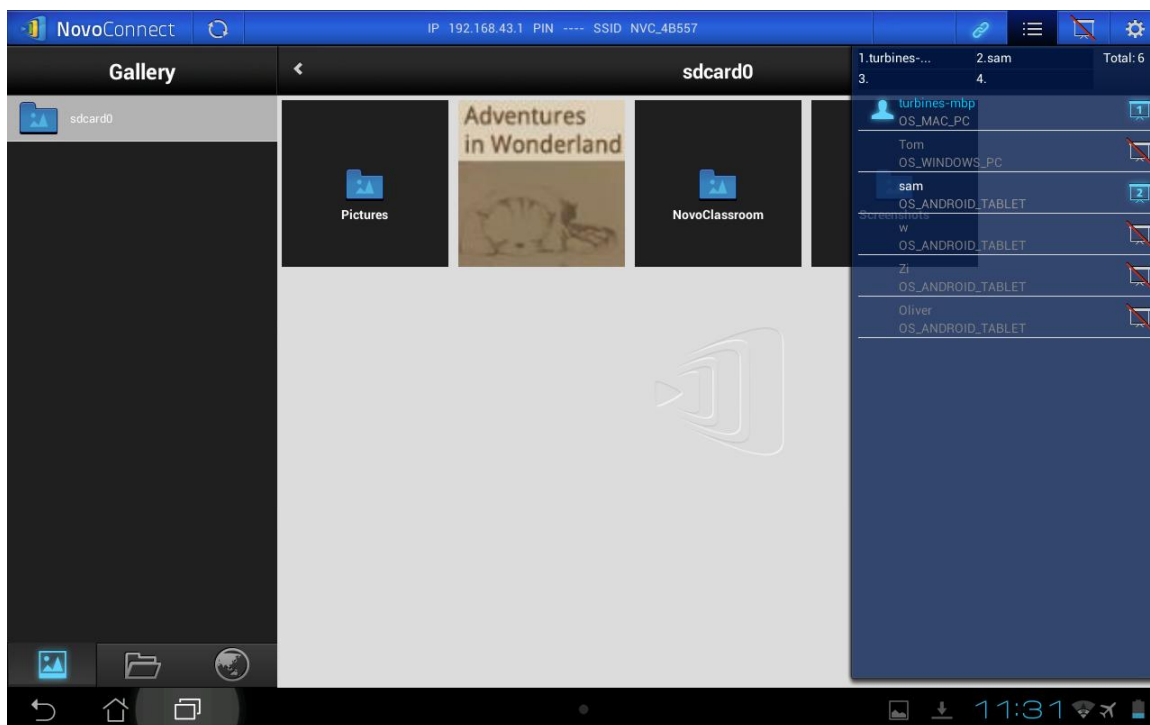


3.3.3.1 Role Assignment

There are three roles in a presentation group, the *host*, the *presenter*, and the *participant*.



The first *participant* to start the presentation group with a B360 is assigned the *host* role. Subsequent joiners are assigned the *participant* role.


The *host* is defaulted to assume the *presenter* role until he assigns the *presenter* role to another *participant*.

To show all current participants who have joined the presentation group, please touch the  tab.

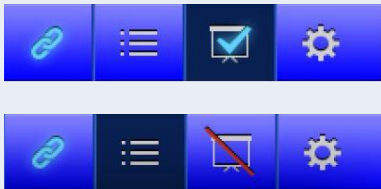Option	Description
	Select  tab to show participant list.  indicates the current host.  indicates the current presenter.  indicates a participant who has denied screen preview.  indicates the current presenter that is presenting in the indicated split-screen Box number (#1-4) (the instance here shows a presenter that is presenting in Box #1). Example: There are six participants in the presentation session – two with iPads, two with Windows PCs, one with an Android tablet, and one with a Mac PC. Oliver is the host who automatically has denied screen preview. Sam is a participant who has denied screen preview. Kevin, Tom, John, and “turbines-Mac-Book-Pro.local” are presenters currently presenting in Box #1-4 of the 4-way split screen (which will be explained in detail later).
	(For non-host users) Toggle between  and  to accept or deny screen preview by the host, respectively.

3.3.3.2 Role Change, Screen Preview, and 4-way Split Screen

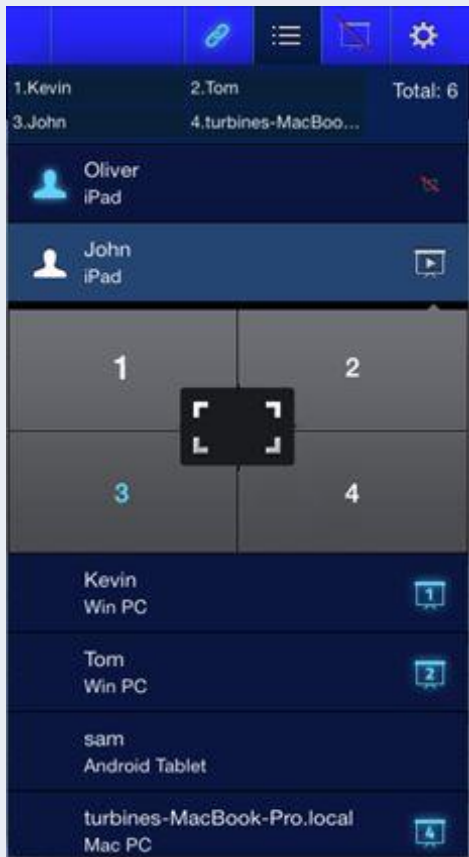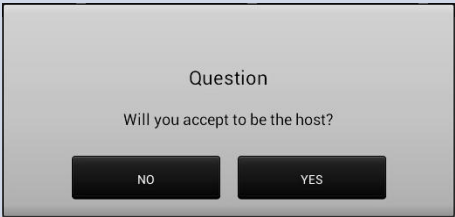Option	Description
	To perform a Role Change: First select the  tab to show the user list.
	Role Change: Highlight <i>participant</i> John (example name) by touching the middle part of John's entry once or twice until both the  and the  icons appear. Touch John's  icon to hand over the <i>host</i> role to him. If the split screen selection area  is not yet present, touch the  icon to bring up the split screen selection area. Touch the  icon of the split screen selection area to request John to be the sole presenter. Touch one of the four boxes (#1-4) in the split screen selection area to assign John to perform a presentation on one of the four boxes of the 4-way split screen.
	Role Change: When a <i>participant</i> is asked to be a <i>host</i>, a dialog box will appear on the participant's screen. The <i>participant</i> has 20 seconds to touch the Yes button to become the new <i>host</i> or touch the No button to reject the <i>host</i> assignment.

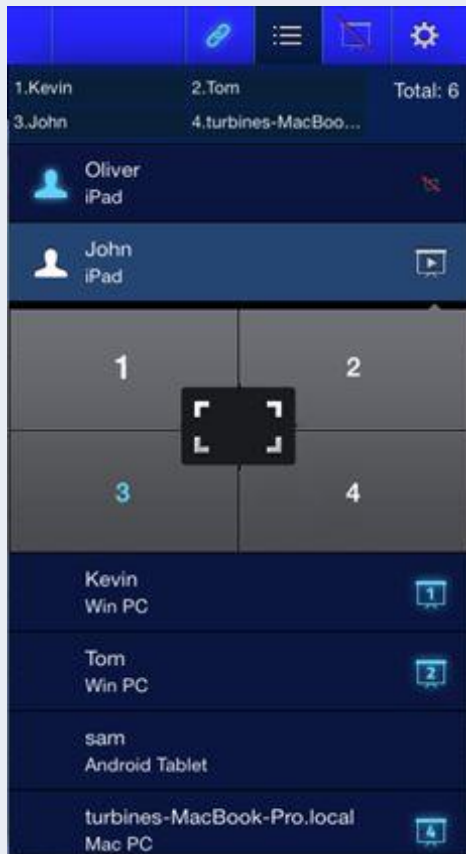

To perform Screen Preview:

Touch the  tab to show the participant list. The *participant* Sam (example name) does not have  icon, indicating that he allows screen preview.



Screen Preview:


Highlight Sam by touching the middle part of his entry to preview his device's on-screen display once or twice until both the  and the  icons appear.



To perform a 4-way split screen presentation:

Touch the  tab to show the participant list.

Select a *participant* to make a presentation. In this example, John (example name) will be selected by touching his entry.

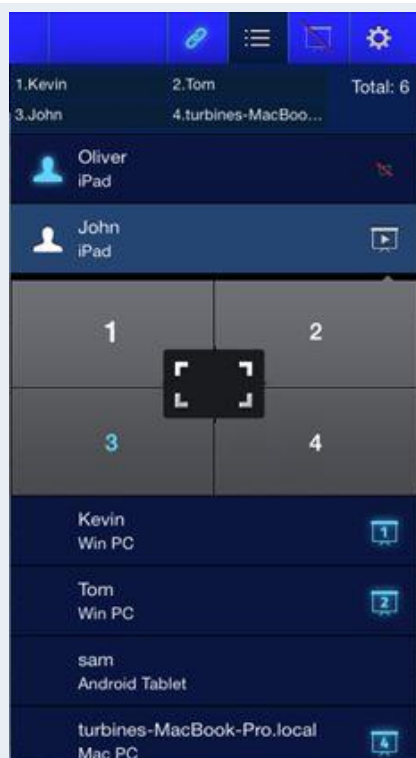

4-way Split Screen Presentation:

Touch John's entry once or twice until both the



and the




icons appear. If the split

screen selection area  is not yet

present, touch the  icon to bring up the split screen selection area.

Touch one of the four boxes (#1-4) in the split screen selection area to assign John to perform a presentation on one of the four boxes of the 4-way split screen.

In this example, John is assigned to make a presentation in Box #3.

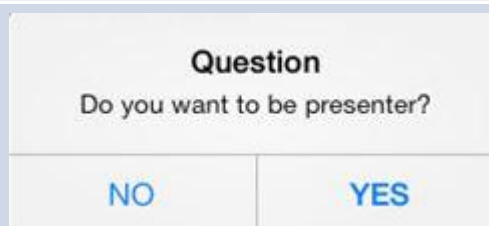

4-way Split Screen Presentation:

John will receive a request to perform a presentation on one of the four boxes of the 4-way split screen.


After John accepts (within 20 seconds) being one of the four possible presenters (by touching the **Yes** button), John's screen will appear on one of the four boxes of the 4-way split screen.

3.3.3.3 Pause, Resume, and Disconnect

Option	Description
	To Pause a Presentation: Touch the  tab to enter the presentation control page.
	Pausing and Resuming a Presentation: Toggle between  and  to pause and resume presentation respectively.
	To Disconnect from a Presentation: Touch the  button to exit the presentation session. If the <i>host</i> exits the presentation session without handing over the host role, all participants will receive a message prompting them to take over the host role. The first to respond to the prompt will assume the role of the <i>host</i>.

3.3.3.4 Reset

Occasionally you may encounter problems with the network or the computer, causing the presentation group to malfunction on your B360. One way to resolve this problem is to reset the presentation group.

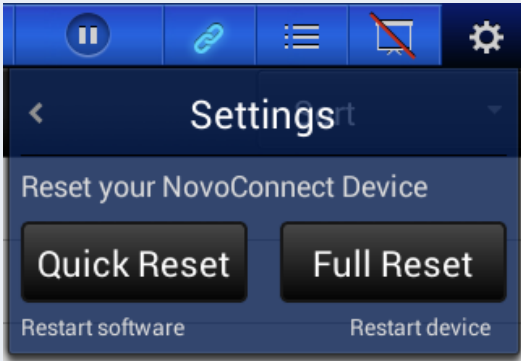Option	Description
	To perform a Reset: First touch the  tab and touch the  arrow of Device's Reset.
	Resetting: Touch the Quick Reset to reset the presentation group to allow a presentation session to start over again. Touch the Full Reset button to reset the NovoConnect B360. The B360 will restart automatically. Conflicts may occur when multiple <i>participants</i> simultaneously attempt to reset the presentation or the B360. The reset privilege priorities are as the following: 1. <i>Host</i>: The <i>host</i> has the sole privilege to quick-reset the presentation group when the <i>host</i> stays connected to the B360. 2. <i>Presenter</i>: If the <i>host</i> loses connection with the B360, the current <i>presenter</i> inherits the privilege to quick-reset the B360. 3. <i>Participant</i>: If the <i>host</i> and the <i>presenter</i> both lose connection with the B360, any <i>participant</i> can quick-reset the presentation group.

3.4 Presenting with the NovoConnect B360 Device


Your NovoConnect B360 device is equipped with an Android operating system inside; it can be used as a computer and make a presentation with or without network connectivity.



The simplest way of making a presentation is to play the presentation files stored in the B360 or a microSD card.

Steps to make a presentation with your NovoConnect B360 Device:

- 1) Save your presentation files into the storage in the B360 device, or insert a microSD card into the microSDcard slot.
- 2) Connect a wired or wireless mouse to your B360 device.
- 3) Connect your B360 to a projector or TV.
- 4) Connect the power source to the B360 device.
- 5) Browse to your file and open it.


You are now ready to go.

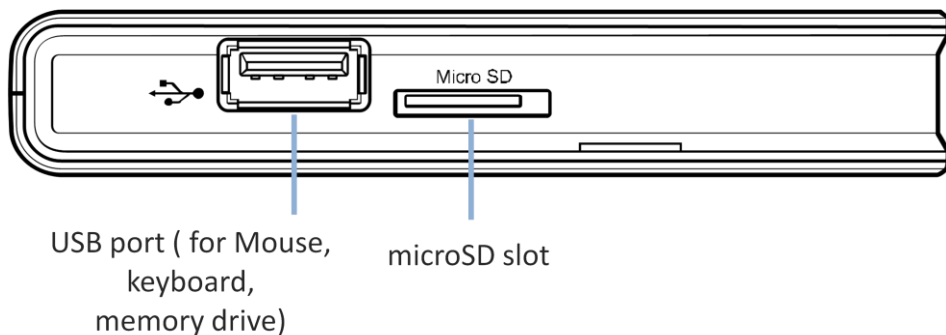

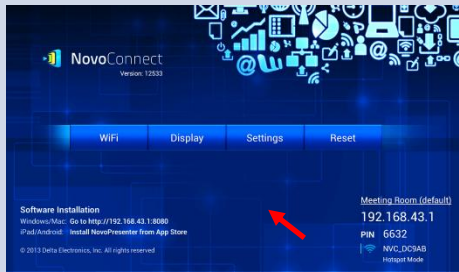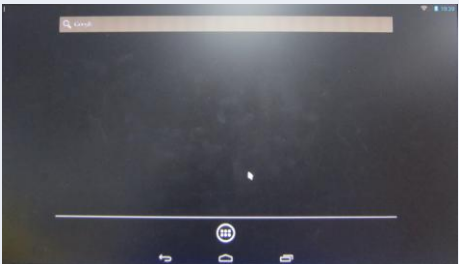
Option	Description
	Click an empty area of the NovoConnect home screen. Then click the home button  .
	Click the apps button  .




Click **File Browser**

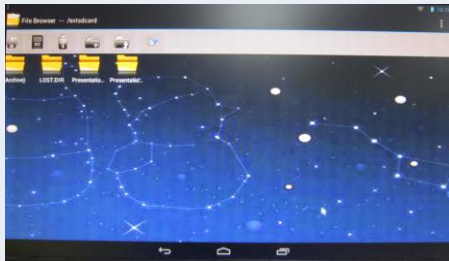

Click the SD card icon

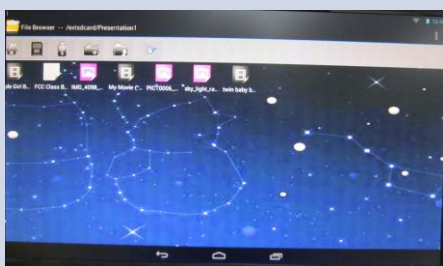


Browse to a folder containing your presentation files. Click the desired file and its contents will be presented.

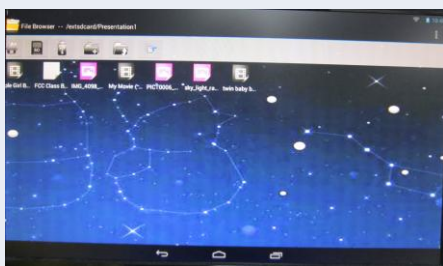


After making a presentation from your microSD card, we recommend that you safely unmount your microSD card before physically removing it from your B360.

Click the home button

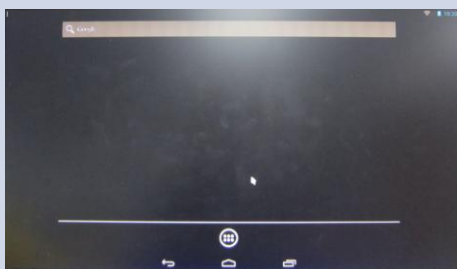


Click the apps button

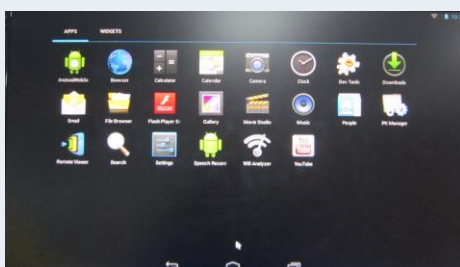


Click **Settings**



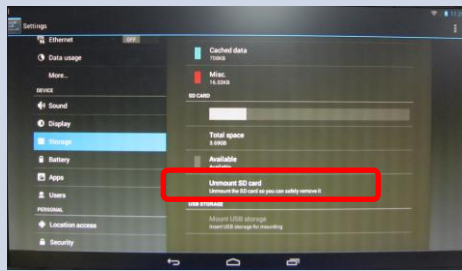

Locate and touch the submenu **Storage**, then scroll down the submenu **Storage** until the option **Unmount SD card** is found. Touch **Unmount SD card**.

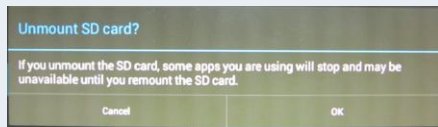


A confirmation window will appear. Click **OK**.




You can now safely remove your microSD card from your B360.

To return to *Remote Viewer*:


Click the home button .

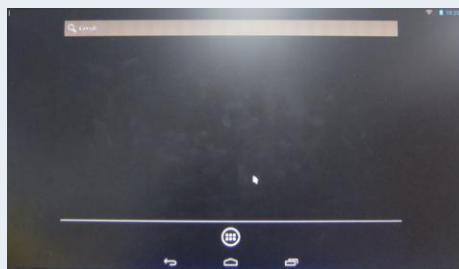

Click the apps button .

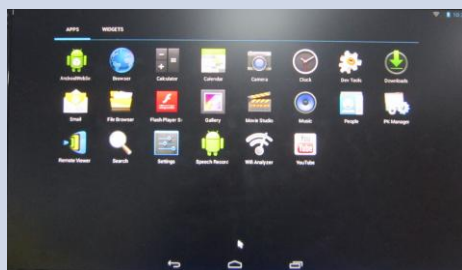

Click **Remote Viewer** .

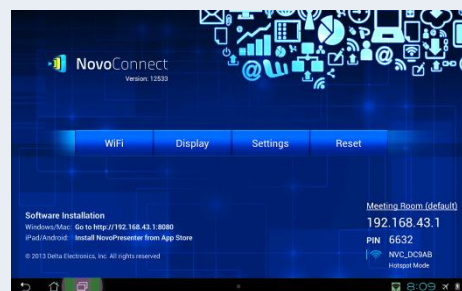

Click  one or more times until the system bar disappears.

4. B360 Configuration

The *Remote Viewer* is the application software on the NovoConnect B360 device that hosts the presentation group. The main function of the *Remote Viewer* is to manage and control all presentation sessions between the participant devices and the NovoConnect B360. In addition to presentation management, the *Remote Viewer* supports the configuration of the below attributes of the B360 device:

- WiFi
- Display
- Settings
- Reset
- Presentation Group Name

Note: Following any clicking activity on the screen, the system bar




appears. Click



one or

more times until the system bar disappears.

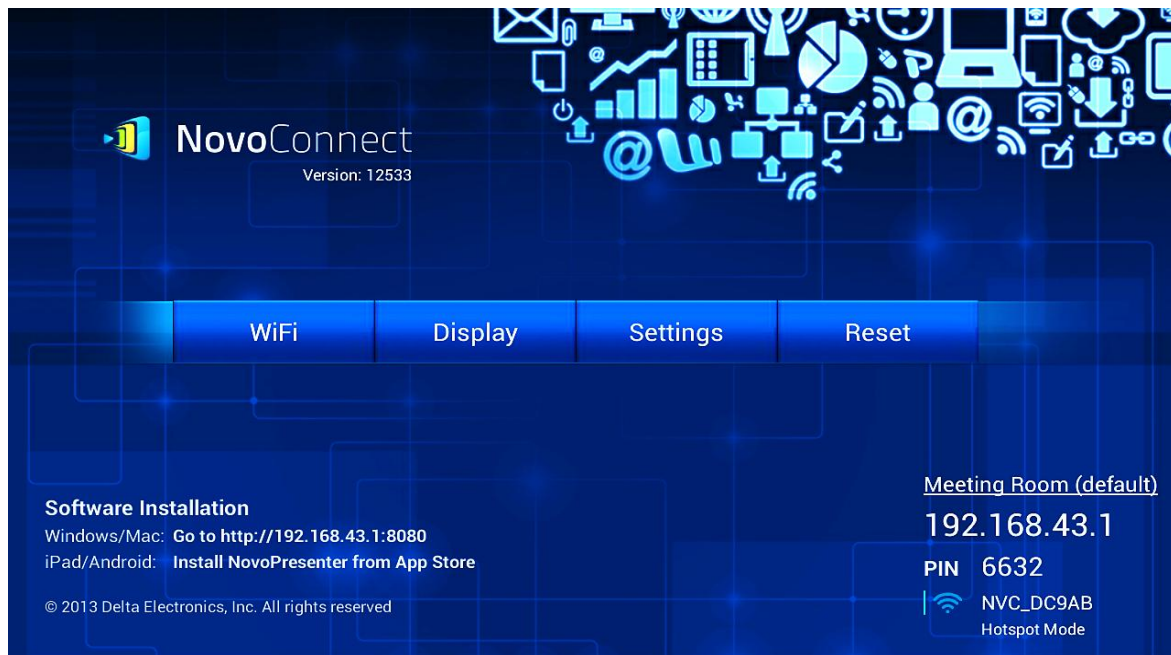


NovoConnect Home Screen

Please go to the NovoConnect home screen to locate the attributes. You will need a USB based mouse to perform setting changes.

Option	Description
	WiFi: Click the WiFi button to bring up the <i>Configure WiFi</i> popup window. Select either Hotspot Mode (B360 is the WiFi host) or Client Mode (B360 is the WiFi client). To set the Wi-Fi mode immediately, click Apply . To further customize and set the selected Wi-Fi



mode in more details, click **Configure** to bring up the relevant Android system menu item of the selected Wi-Fi mode.

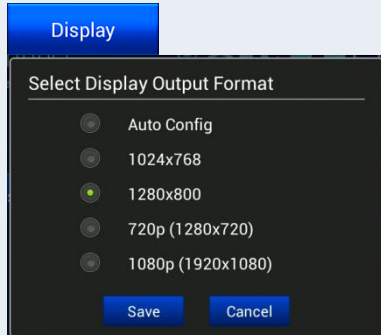

Display:

Click the **Display** software button to bring up the *Select Display Output Format* popup window. Select one of the following screen resolution options (the presenter devices' resolutions will be automatically adjusted to match the selected option):

Auto Config

automatically determines the optimal screen resolution


1024x768

1280x800

720p (1280x720)

1080p (1920x1080)

Click **Save** to make the selection official, or click **Cancel** to abort the selection.

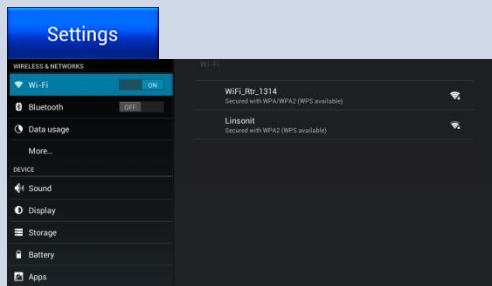


Settings:

For more detailed device settings of your B360, click the **Settings** software button to access the Android system menu.



Reset:

To fully reset the NovoConnect B360: Press and hold on the **Reset** tab 2 seconds. The B360 will restart.

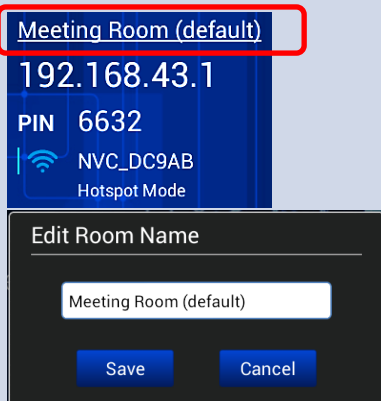

Presentation Group Name:

Click on the presentation group name shown on the lower right corner of the NovoConnect home screen. This will bring up the *Edit Room Name* popup window. Enter the new presentation group name using the on-screen soft keyboard or a physical keyboard. Click **Save** to make the name change official, or click **Cancel** to abort the name change.

5. Specifications

Hardware Specifications	
Power Supply	5VDC, 2A
Power Consumption	10W
Output Resolutions	1024x768 (XGA), 1280x720 (HD), 1280x800 (WXGA), 1920x1080 (Full HD), Auto Config
CPU (SoC)	ARM Cortex A9 Video Decoder/Encoder (H.264, VC-1, VP8)
Memory	DDR 1024MB
Storage	Internal: 4GB (eMMC Flash) External: microSD Card Slot
WiFi	802.11 b/g/n (2.4GHz & 5GHz)
Input/Output	USB Input USB Type A x 1 Video Output Micro HDMI x 1 Card Reader microSD Card Slot x 1 Power Input Micro USB (5V 2A)
LED Indicator	Green (Power On)
Button/Switch	Reset
Dimensions	88 x 55 x 16 mm (L x W x H)
Weight	105 g
PC/Notebook Application Requirements	
CPU	Intel Pentium, 2GHz (i3 and above are preferred)
Operating System	Windows XP, Windows 7, Windows 8 (32 bits and 64 bits), Mac 10.6 and above
RAM	4 GB
Android Mobile Device Application Requirements	
Operating System	Android 3.2 and above (Android 4.0 and above are recommended)
Resolution	1024x768, 1280x800, or Higher are recommended

iOS Mobile Device Application Requirements	
Operating System	iOS 5.1 and above
Device Type	iPad, iPad 2, iPad 3, iPad 4, iPad mini, and iPad Air

6. Troubleshooting

Q: NovoConnect does not operate.

A: Check if the proper DC power supply with the appropriate operating voltage and sufficient operating current (5VDC, 2A) is connected to the Micro-USB port of the NovoConnect B360.

Q: My PC cannot link to NovoConnect wirelessly.

A: Your PC must either have a built-in a WiFi module or an external WiFi adapter, and WiFi must be enabled. If the NovoConnect B360 is set to Hotspot Mode (factory-default mode), choose NovoConnect's SSID from the available SSID list. If NovoConnect is set to Normal Mode and is connected to a particular WiFi router, choose that router's SSID from the available SSID list.

Q: The play/pause buttons do not work.

A: These buttons are functional only for presenters.

Q: I cannot connect to the internet on NovoConnect.

A: This is normal if the NovoConnect B360 is set to Hotspot Mode, since NovoConnect by itself does not support WWAN (wireless wide area network) connection. To use internet features, such as web page browsing, on NovoConnect please set its wireless connection to Normal Mode and connect to a WiFi router that is connected to the internet.

Q: My PC or mobile device has failed to login to NovoConnect.

A: WiFi may not be enabled on your device, or the WiFi access point that your device is connected to is not the NovoConnect B360 or the same WiFi access point that the NovoConnect B360 is connected to.

First, make sure that WiFi is enabled on your device. If NovoConnect is set to Hotspot Mode (factory-default mode), choose NovoConnect's SSID from the available SSID list. ~~On~~ If NovoConnect is set to Normal Mode and is connected to a particular WiFi router, choose that router's SSID from the available SSID list.

Q: I cannot choose to present in full screen or in one of the split screens.

A: You are not the host at the moment. Wait for a presentation invitation from the host, who has the authority to decide whether your presentation is to be seen in full screen or one of the split screens. You may be invited to be the host if the Reset Host button is clicked on the NovoConnect B360, if the host explicitly hands over host control to you, or if all other presenters have disconnected from NovoConnect.

Q: I am the host, but I cannot preview other presenters' screen.

- A: To preview a particular presenter's screen before sending a presentation invitation, that presenter must have screen preview enabled on his device.
- Q: My device's on-screen display looks stretched or compressed on NovoConnect's screen output.
- A: There may be an aspect ratio mismatch between the NovoConnect B360's chosen output resolution and your device's screen aspect ratio (e.g. your device's screen has the 4:3 aspect ratio, and you have set NovoConnect's output resolution to a 16:9 or 16:10 option). Try to set the display resolution on the NovoConnect B360 so that it has an aspect ratio either matching that of your device or is as close to your device's screen aspect ratio as possible, or you can let NovoConnect automatically determines the best output resolution.

7. Safety Information

Refer to the manual and take note of the safety instructions before operating your device.

- Ensure that the power source's output voltage matches your device's operating voltage.
- To prevent the risk of electric shock, do not operate this device near water or in environments of high moisture.
- Do not disassemble or try to repair this device by yourself. Contact your local Delta service center for assistance.
- Keep the device's plastic packages out of the reach of children.